

<b>TITLE</b>	<b>Service Manu LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>1/44</b>

# ÖLEVIA

## ***Service Manual***

### **LCD TV For 232-S12**

**Doc No. :**

**Version : 1.0**

**Total Pages : 41**



<b>Approval</b>	<b>Made by</b>	<b>Revise by</b>	<b>Revise by</b>
<b>Hans Chung</b> 2007/1/29	<b>Kanzi Lee</b> 2007/1/29	<b>Daniel Villa</b> 12/8/06 Troubleshooting/disassembling /Firmware Update/EDID Update/Manual Structure	<b>Randal J. Cook</b> 12/7/06 <b>Introduction</b>

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>2/44</b>

## Table of Contents

1. Introduction.....	3
1-1 Preface.....	3
1-2 Caution.....	3
1-3 Warning.....	3
2. Specifications.....	4
3. Wiring Diagram.....	5
4. Trouble shooting flow chart.....	6
4-1 Abnormal Display.....	6
4-2 Abnormal Power On/Off.....	7
4-3 LED Light Abnormal Display、Keypad Problem.....	8
4-4 Image Abnormal Display.....	9
4-5 Audio Abnormal Output.....	10
4-6 The Other Abnormal Display.....	11
5. Disassembly.....	12
5-1 Stand.....	12
5-2 Back Cover.....	12
5-3 System Board.....	13
5-4 Power Module.....	14
5-5 Panel Module.....	15
5-6 Speaker.....	16
5-7 Keypad Board.....	16
6. Firmware upgrade.....	17
7. EDID write in and ADC correction and Parameter Adjustment.....	20
7-1 EDID write in.....	20
7-1.1 EDID tools.....	20
7-1.2 EDID write in.....	20
7-2 ADC Correction and Parameter Adjustment.....	21
7-2.1 ADC Correction.....	21
7-2.2 Parameter Adjustment.....	22
8. Exploded view.....	23
9. Parts List and Photo.....	25
9-1 Parts List.....	25
9-2 Parts Photo.....	26
9-3 Parts List(Low bright panel).....	33
9-4 Parts Photo(Low bright panel).....	34
10. Block Diagram.....	41

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>3/44</b>

## **1. Introduction**

### **1-1 Preface**

This service manual describes module-level LCD TV repair for qualified service personnel. This service manual also includes selected production troubleshooting information for electronic technicians and engineers.

### **1-2 Caution**

This service manual contains important safeguards and instructions that must be followed for the safe and proper servicing of this TV.

### **1-3 Warning**

1. Advise customers to follow all operating instructions and safety precautions that have been furnished with the product.
2. Unplug the ac line cord before cleaning or disassembling the product.
3. Check the ac line cord and plug for wear or damage and replace as necessary.
4. Do not use liquid cleaners or aerosol cleaners to clean the display.
5. Do not place the product on an unstable table or cart. It can cause the product to fall, resulting in injury and product damage. If a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
6. Use only replacement parts specified by the manufacturer or replacement parts with the same performance and safety characteristics. Use of substitute parts with different characteristics can result in fire or electric shock.
7. Do not hit the LCD panel. In case of breakage, use care when removing broken glass.
8. Keep the product away from heat sources such as radiators, heaters, stoves, and other heat-generating apparatus.
9. Do not block any ventilation openings.
10. Do not use the product near water; for example, near a bathtub, washbasin, kitchen sink laundry tub, in a wet basement, or near a swimming pool.
11. If the product uses a grounded-type ac plug and line cord, but the location has a 2-prong receptacle, advise the customer to contact a qualified electrician to replace the outlet.

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>4/44</b>


## 2. Specifications

### **PRODUCT SPECIFICATIONS**

<b>LCD Panel</b>	<b>32" TFT</b>
<b>Power Management (Standby Mode)</b>	<b>&lt; 1W</b>
<b>Displayable Resolution</b>	<b>VGA 1360*768 max.</b>
<b>Pixel Pitch</b>	<b>0.17025mm x 0.51075mm x RGB</b>
<b>LCD Display Color</b>	<b>16.7M colors(8-bits colors).</b>
<b>Viewing Angle</b>	<b>178(H)/178(V) (CR&gt;10)</b>
<b>Response Time</b>	<b>8ms (Gray to Gray)</b>
<b>Active Display Area</b>	<b>697.685mm x 392.256mm (31.51" diagonal)</b>
<b>RF Tuner</b>	<b>Combo RF (NTSC/ATSC)</b>
<b>Power</b>	<b>Voltage : 100~240 V Consumption : 164W</b>
<b>Speaker</b>	<b>10W</b>
<b>Compliance</b>	<b>FCC, cUL, CSA, Energy Star</b>
<b>Temperature</b>	<b>Operating: -10°C~40°C Storage: -10°C~60°C</b>
<b>Weight w/o stand</b>	<b>33.63lbs</b>
<b>Weight w/ stand</b>	<b>35.5lbs</b>
<b>Gross Weight</b>	<b>45.421lbs</b>
<b>Dimensions (WxDxH)</b>	<b>37.76 inches x 9.37 inches x 22.20 inches</b>
<b>Carton Dimensions (WxDxH)</b>	<b>42.80 inches x 12.40 inches x 25.35 inches</b>

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	5/44

### 3. Wiring Diagram

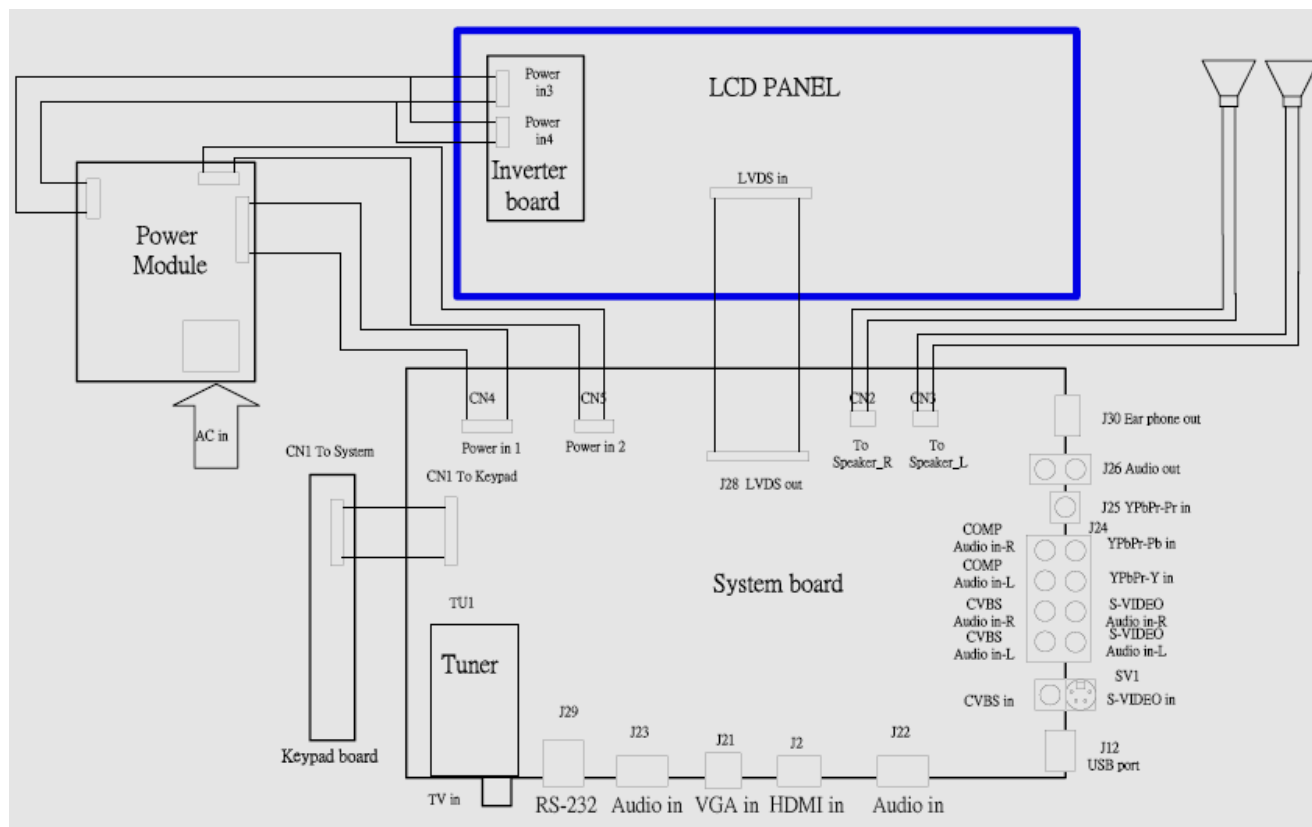


TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	6/44

## 4. Trouble shooting flow chart


### 4-1 Display Problems

**Note: Refer to the Wiring Diagram during troubleshooting for a visual of inter-connections when indicated by this  symbol.**

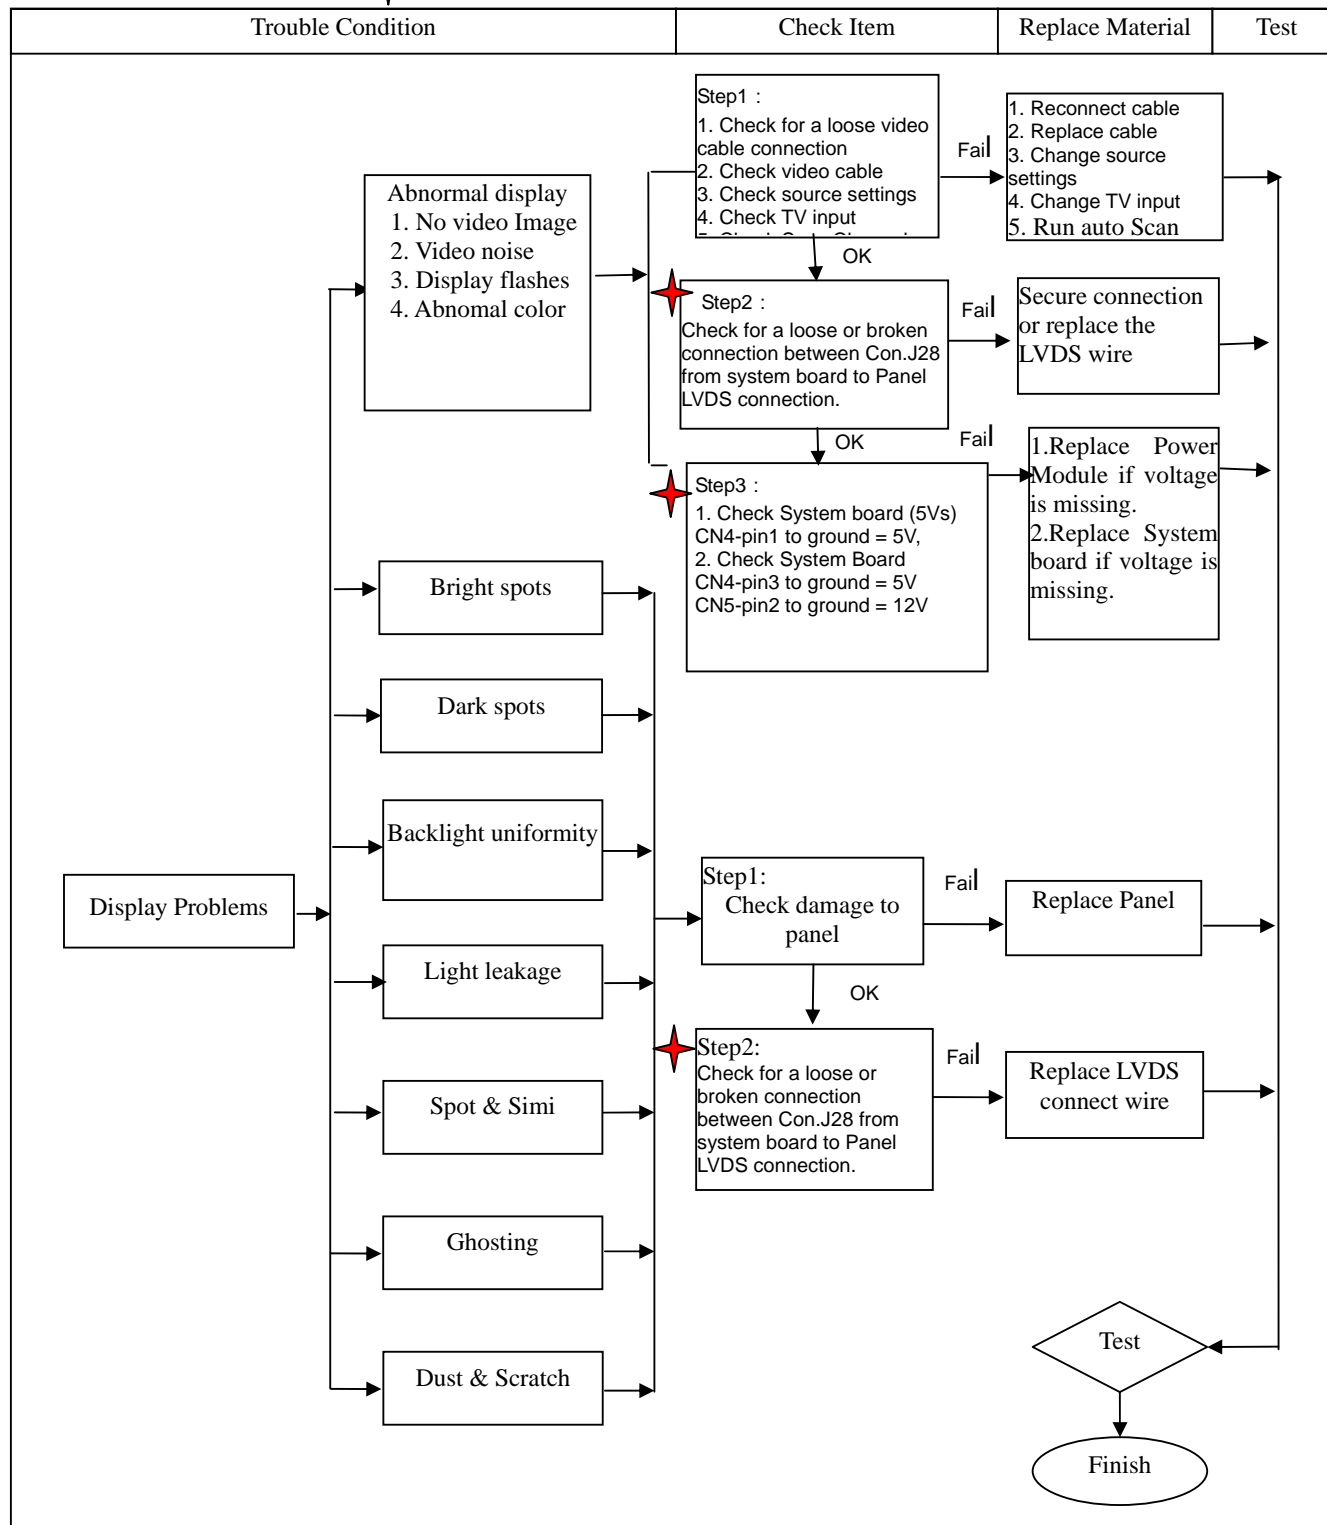


TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	7/44

## 4-2 Abnormal Power On/Off

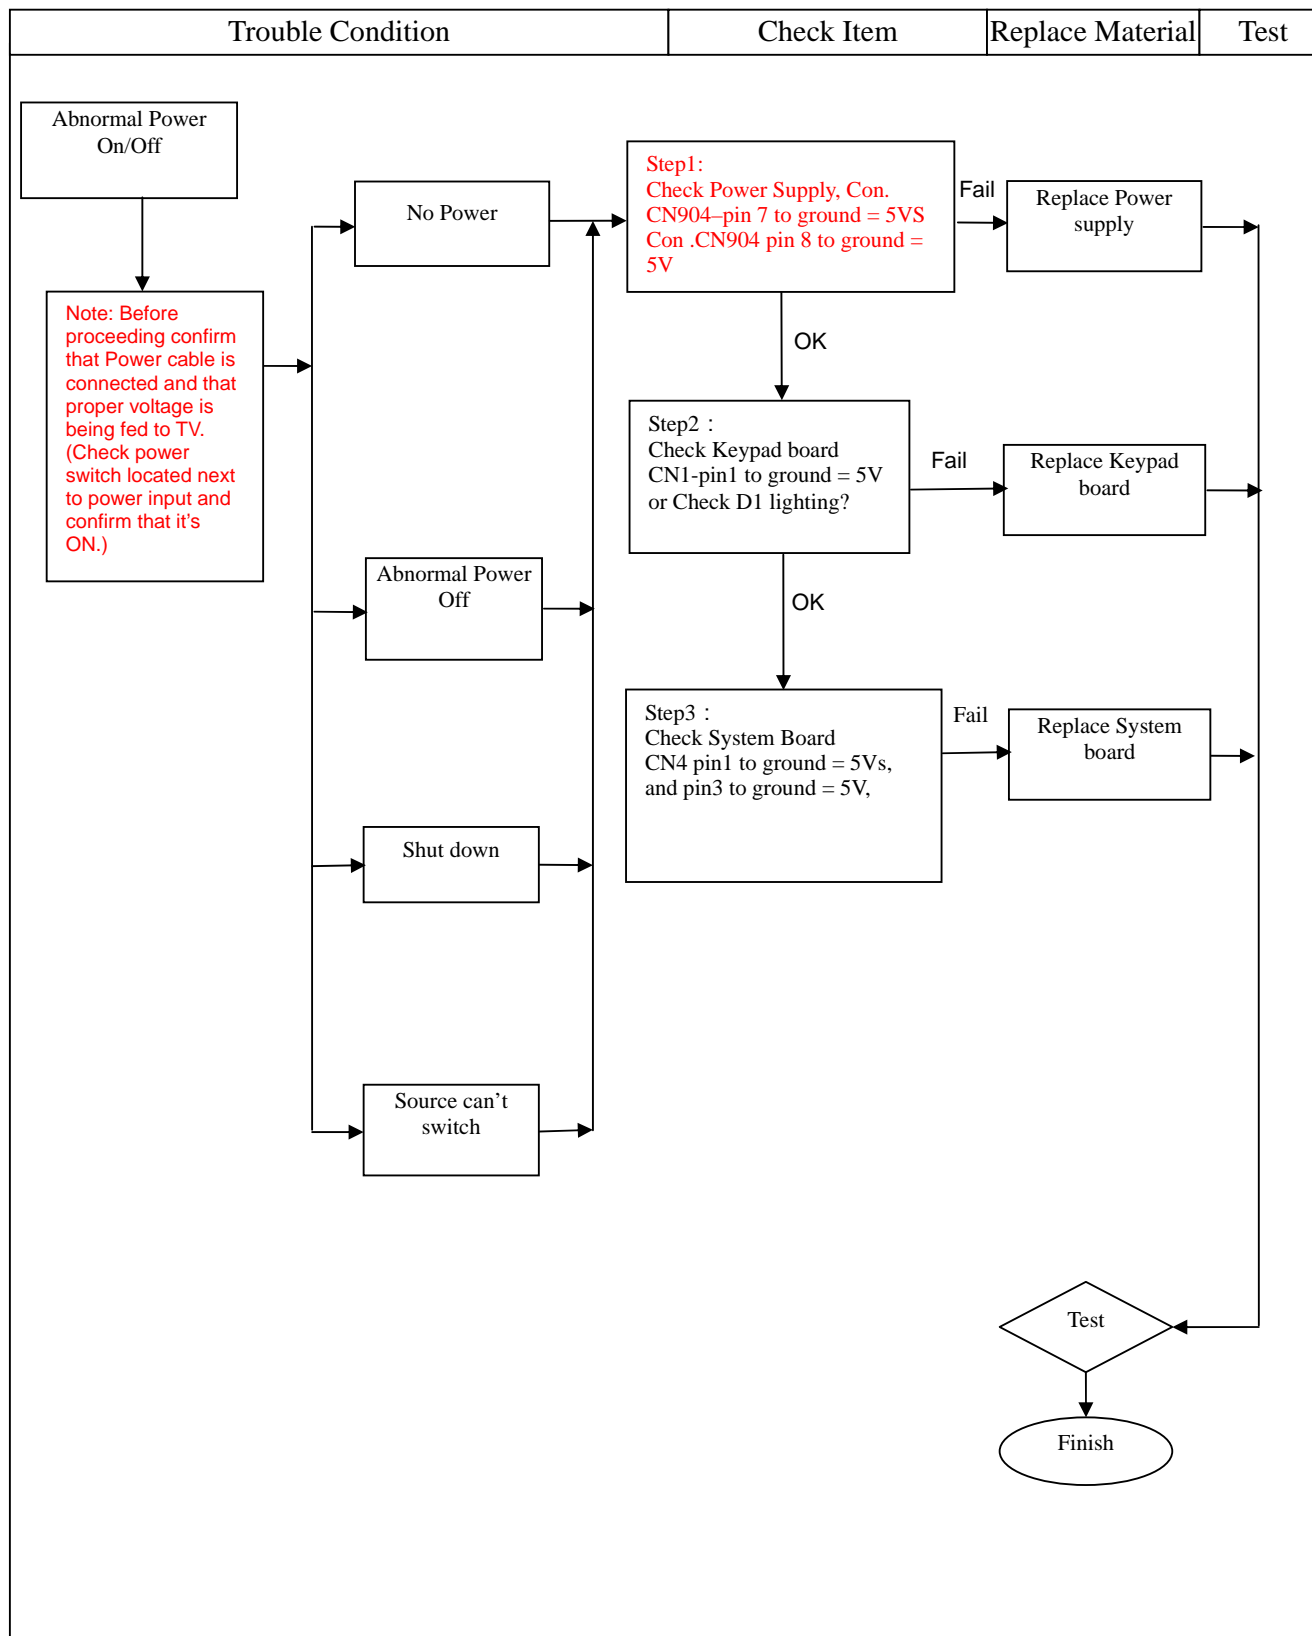

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	8/44


### 4-3 LED is Malfunctioning、Keypad Problem

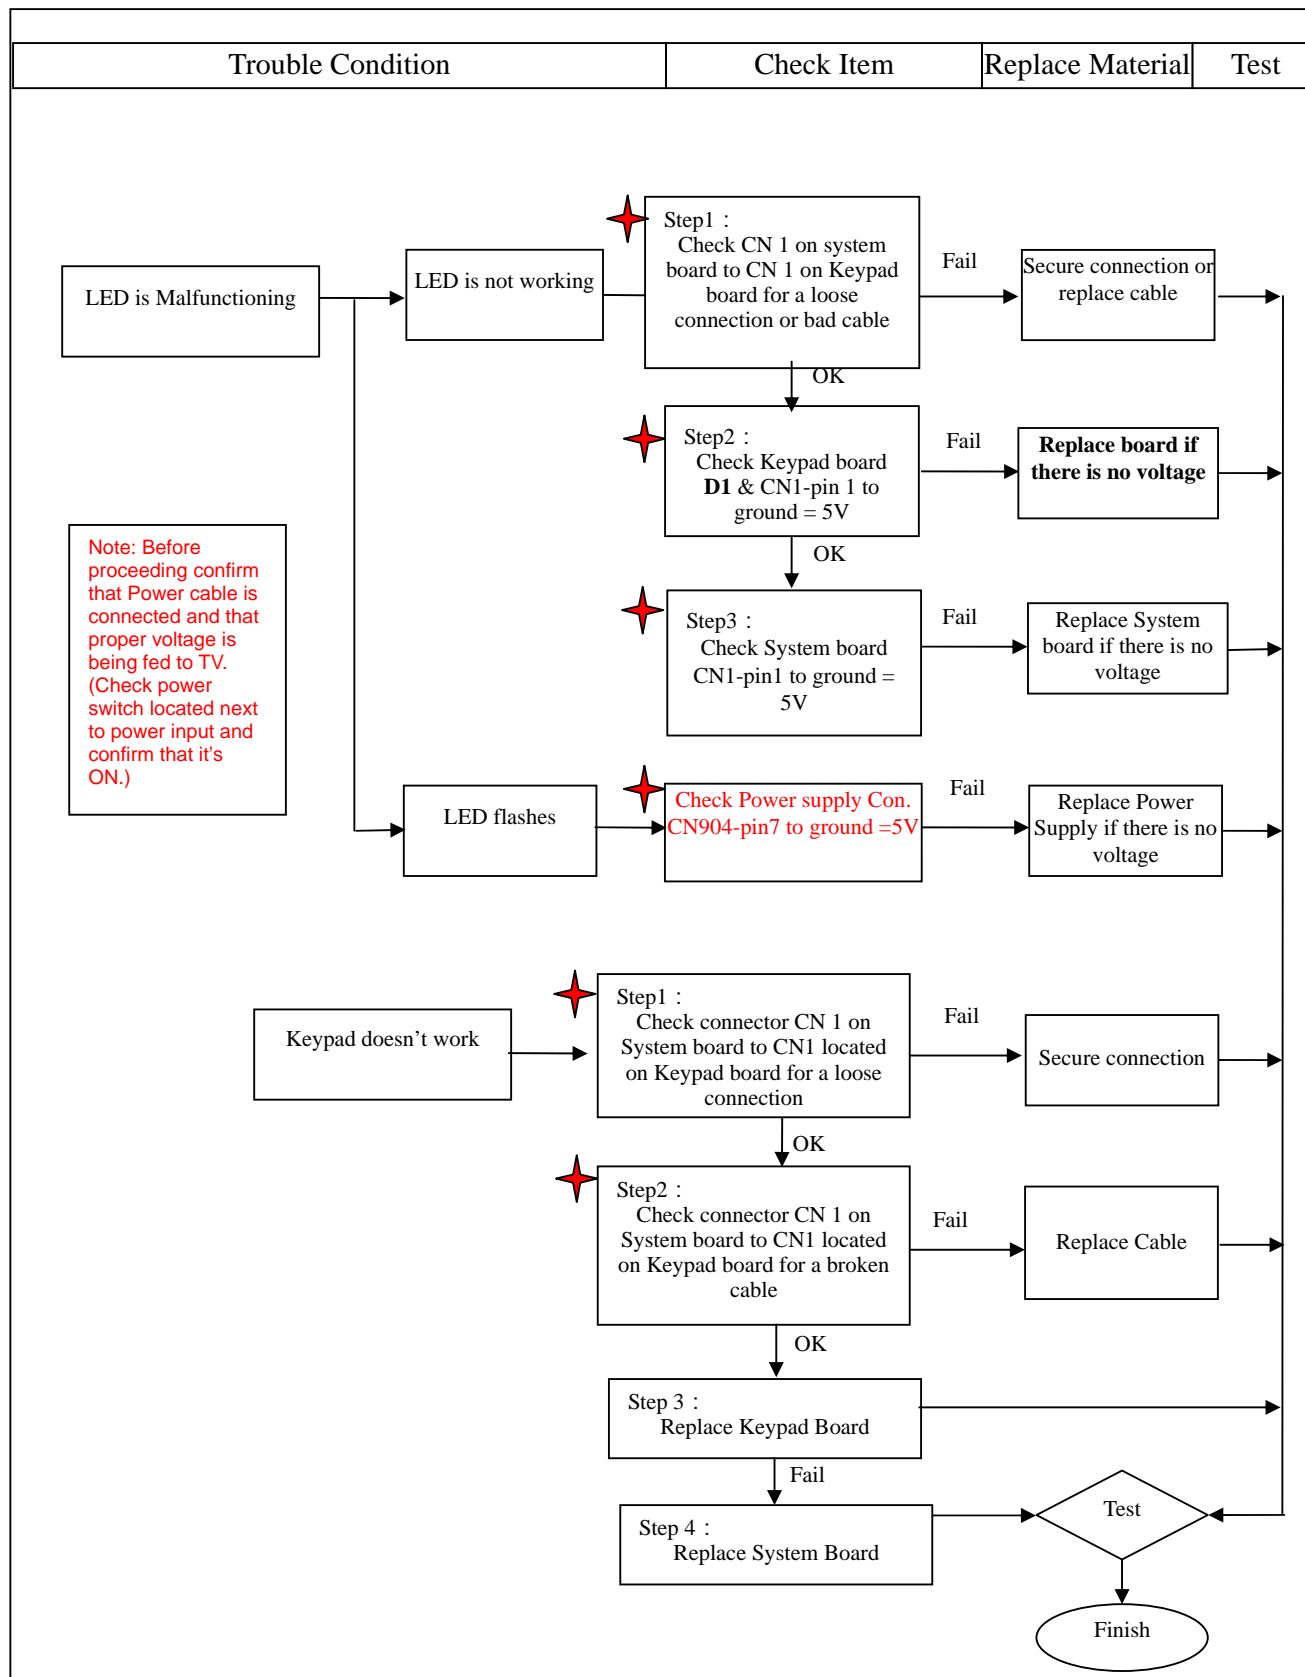




TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	9/44

#### 4-4 Image Problems

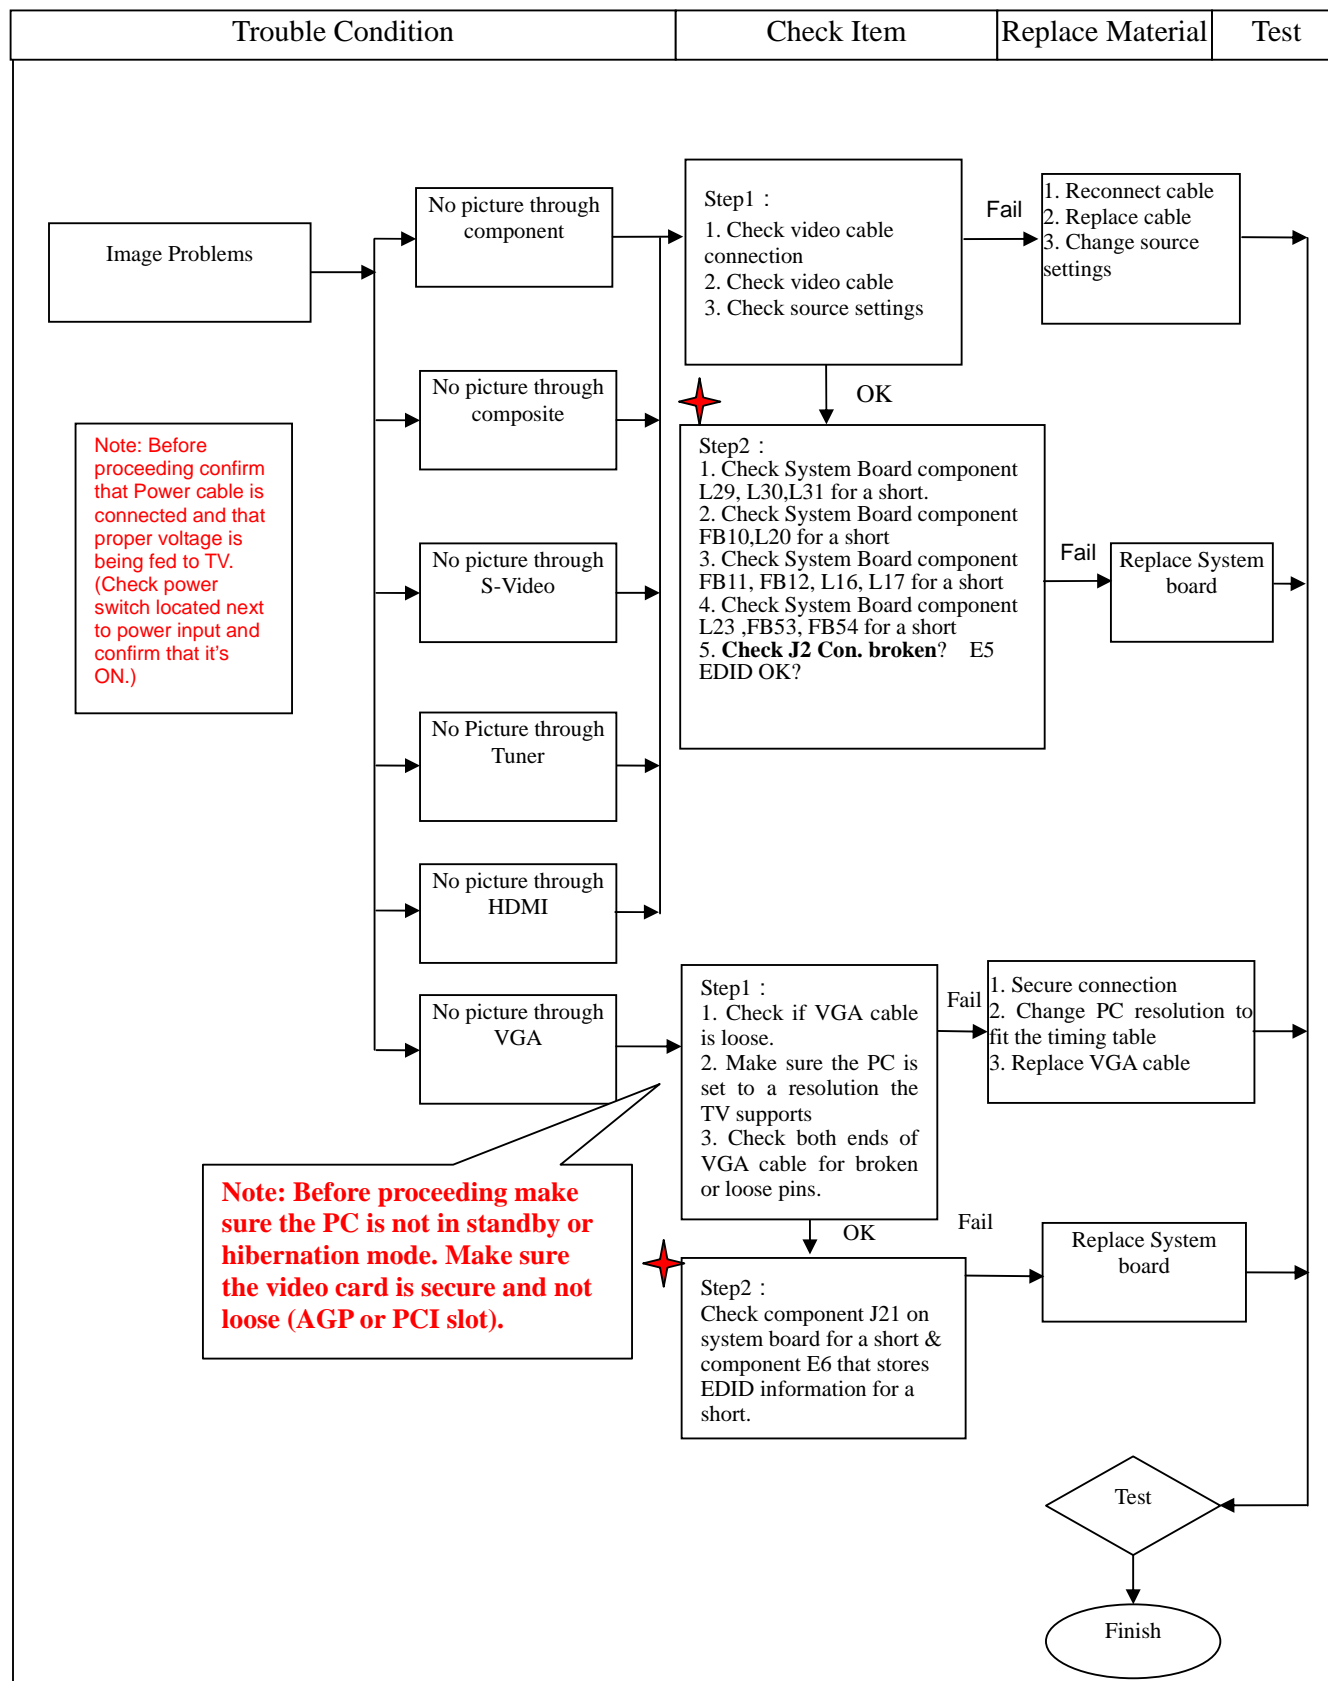


TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	10/44

## 4-5 Audio Problems

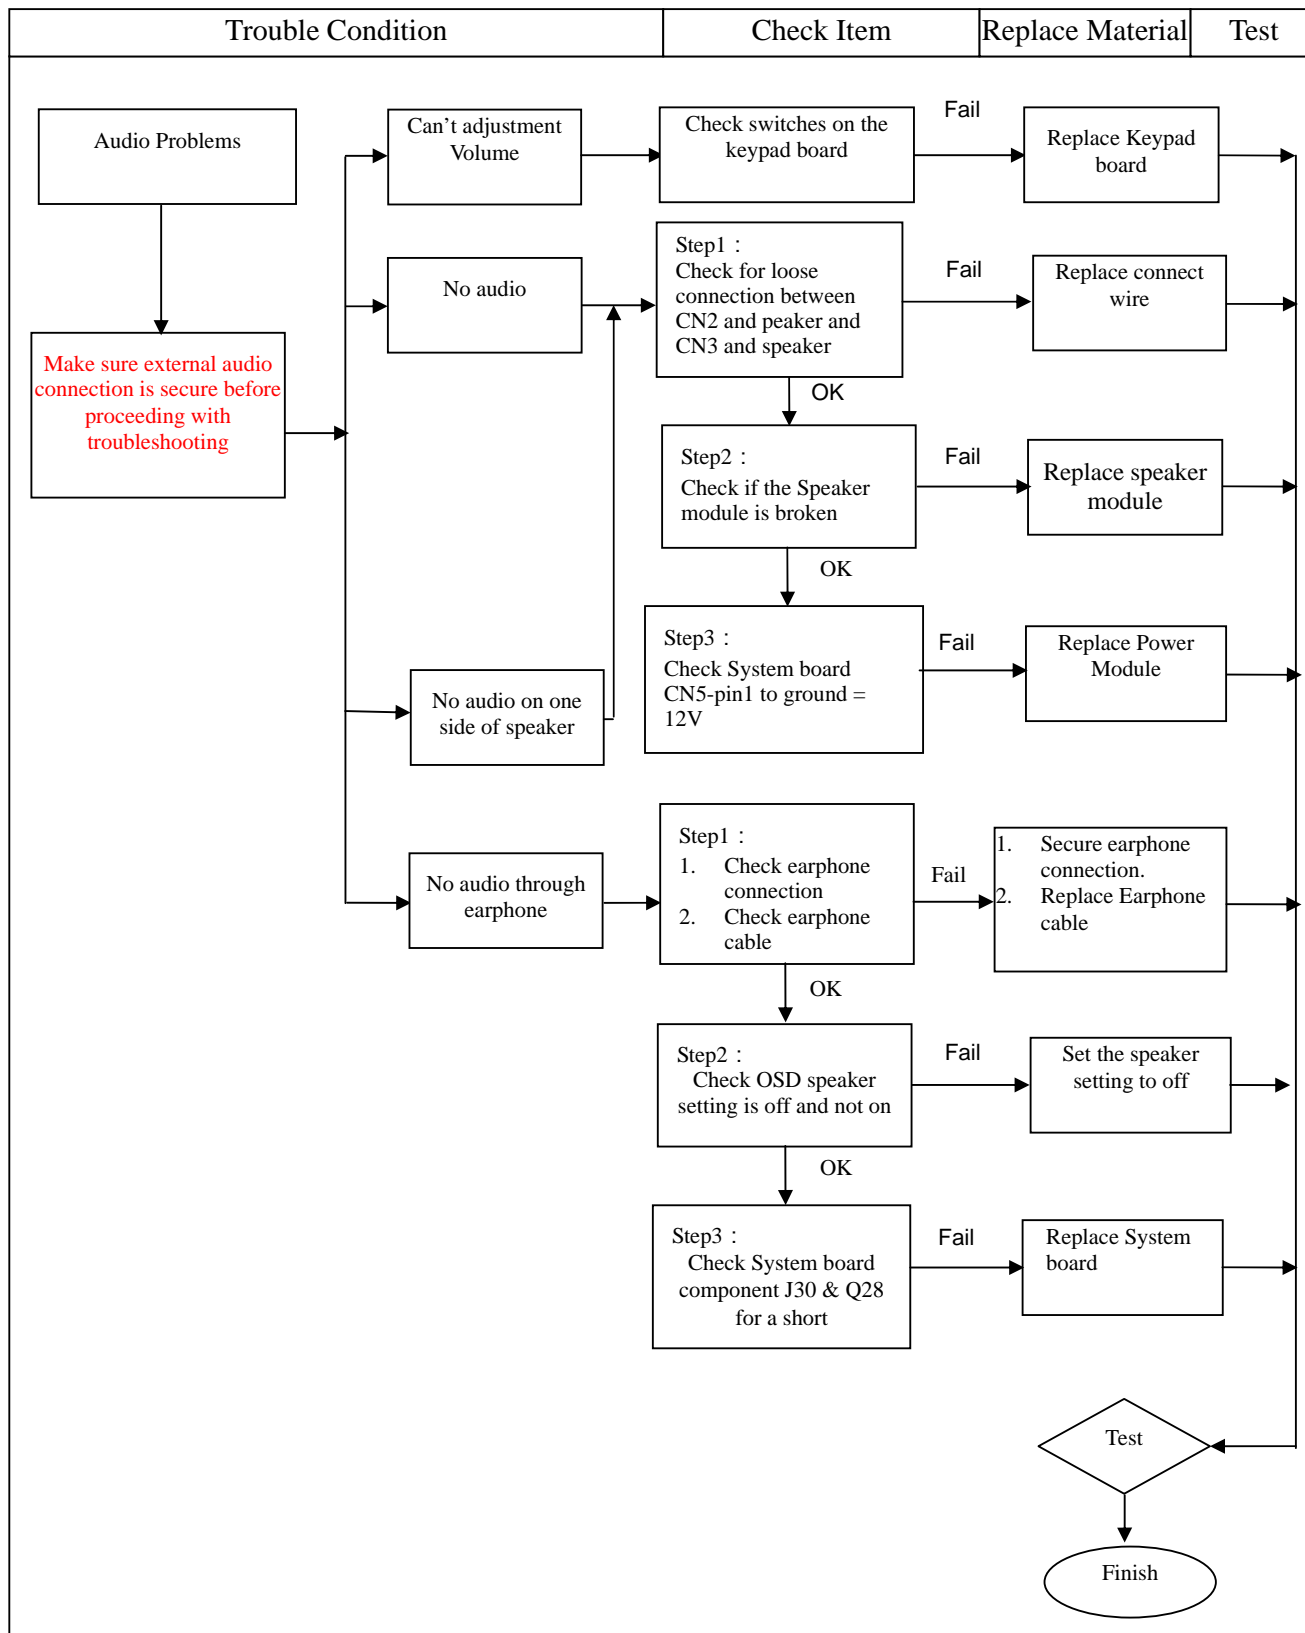

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>11/44</b>


#### 4-6 Other Problems

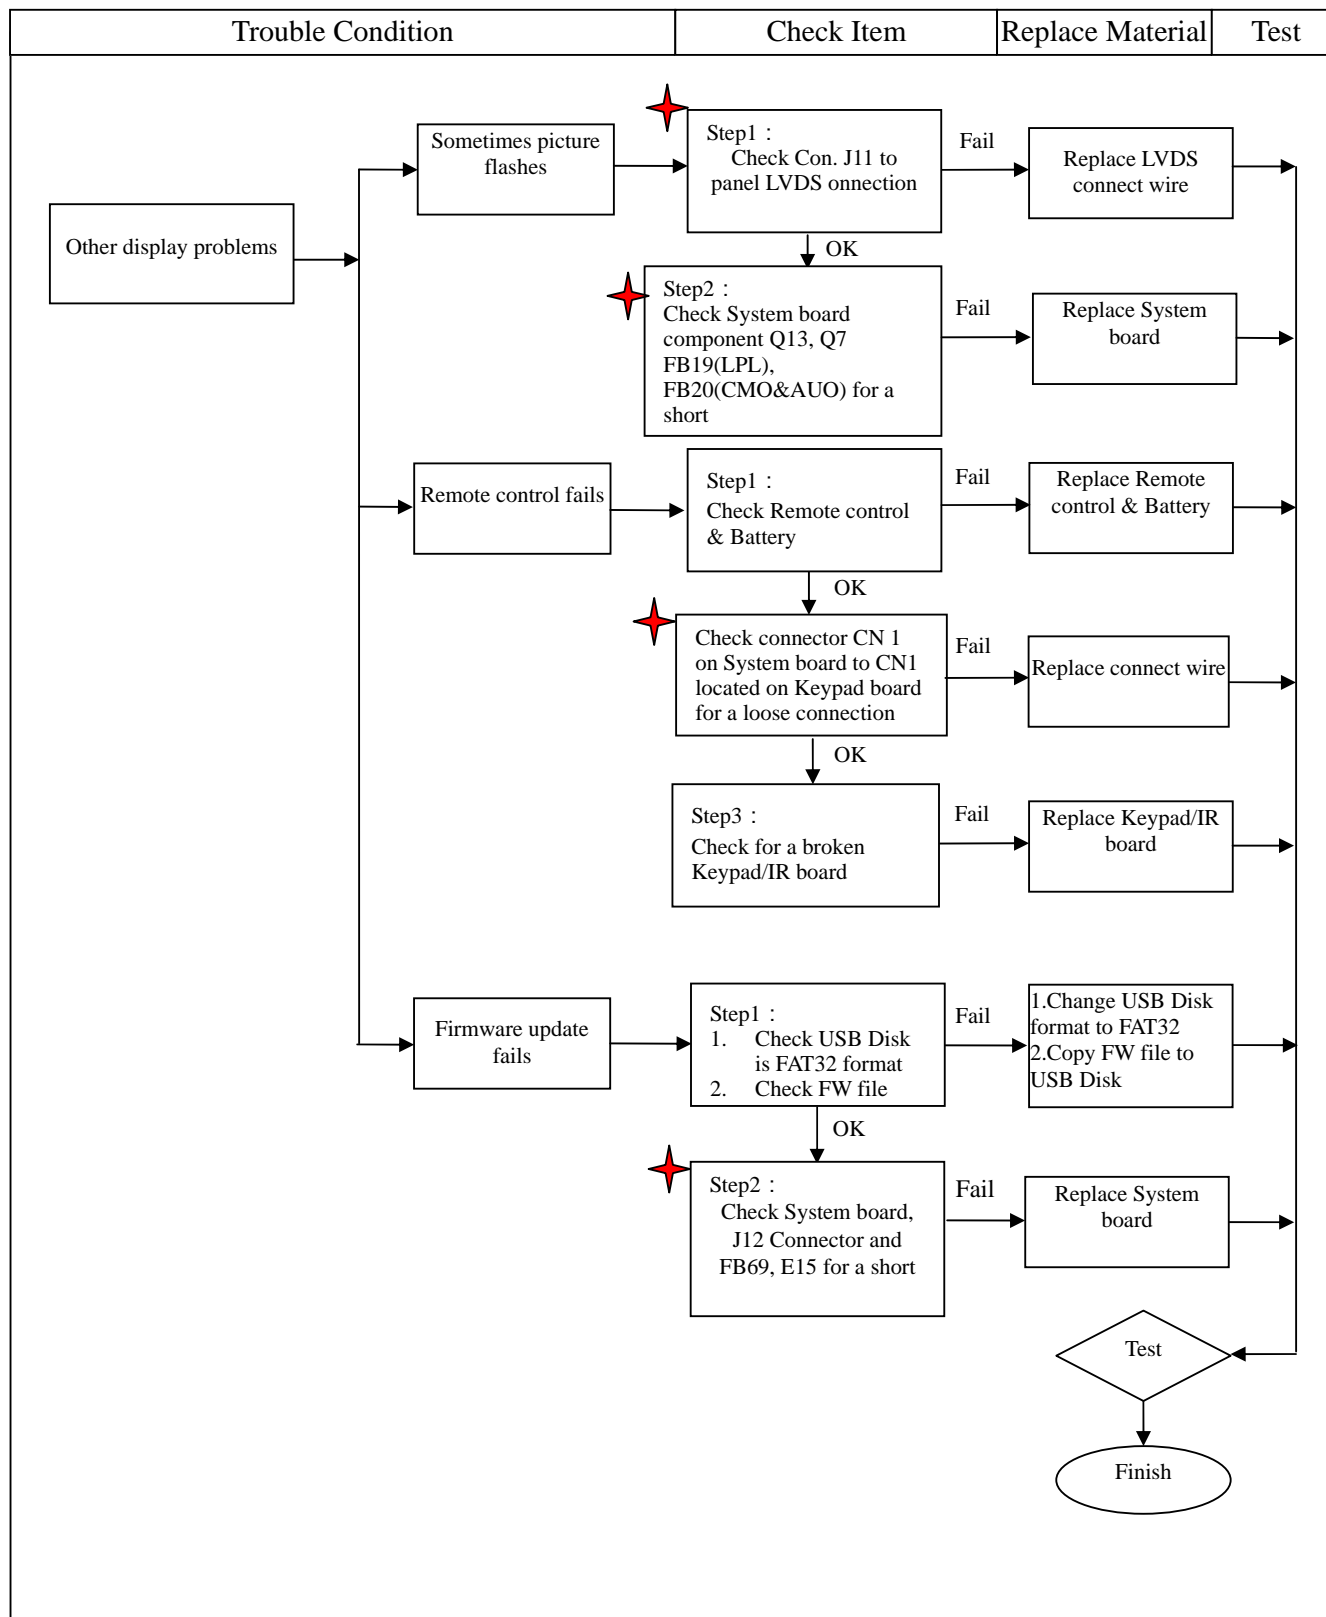

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	12/44

## 5. Disassembly

### 5-1 Stand

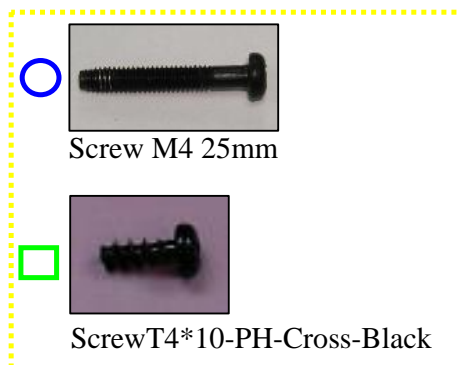

1. Loosen and remove 8 screws.
2. Safely remove the **Stand**.


### 5-2 Back Cover








1. Loosen and remove 10 screws.
2. Safely remove the **Back Cover**.

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	13/44

### 5-3 System Board

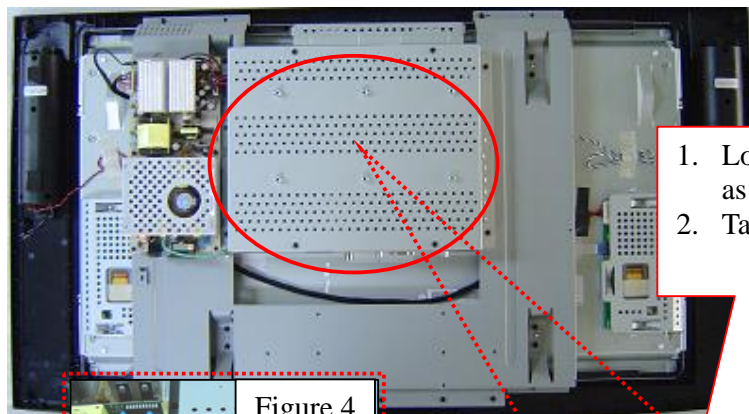

1. Loosen and remove 17 screws as indicated in Figure 1~4.
2. Take off the **Support Metal**.

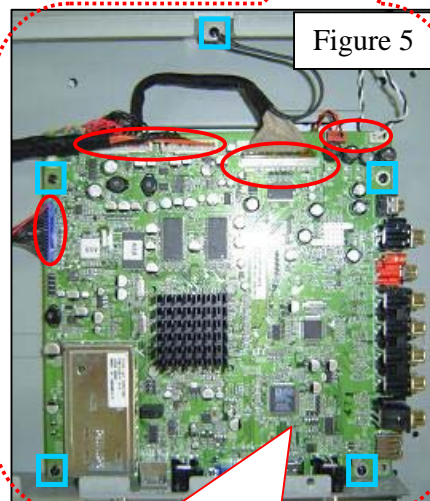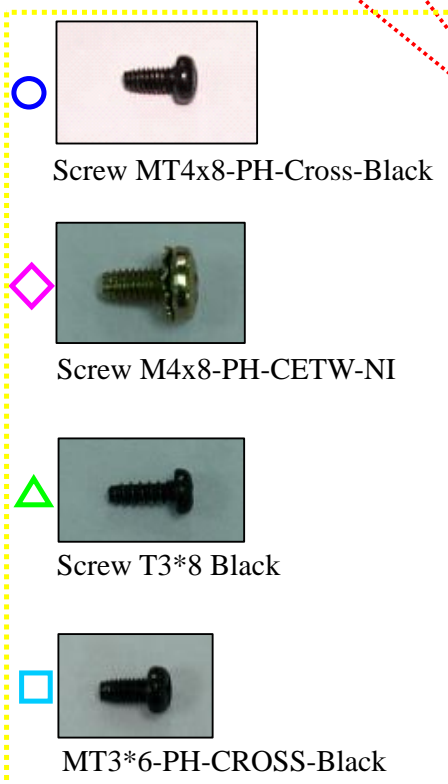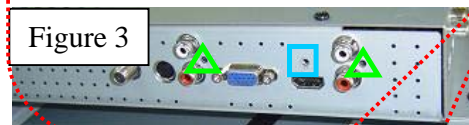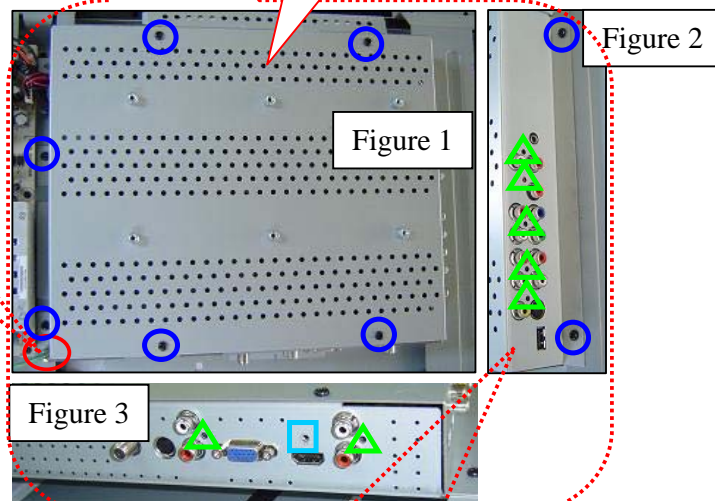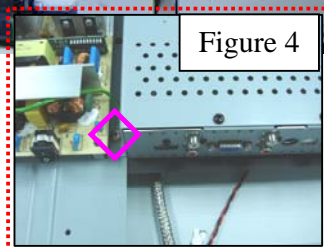


3. Loosen and remove 5 screws and safely remove connectors as indicated by red circles on Figure 5.
4. Take off the **System Board**.




TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	14/44


## 5-4 Power Module

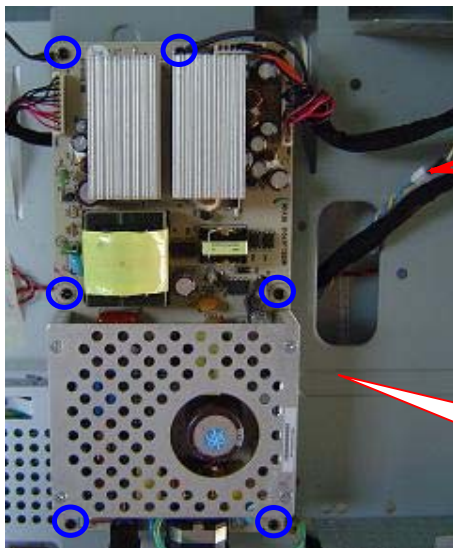

1. Loosen and remove 6 screws and safely remove connectors indicated by red circles.

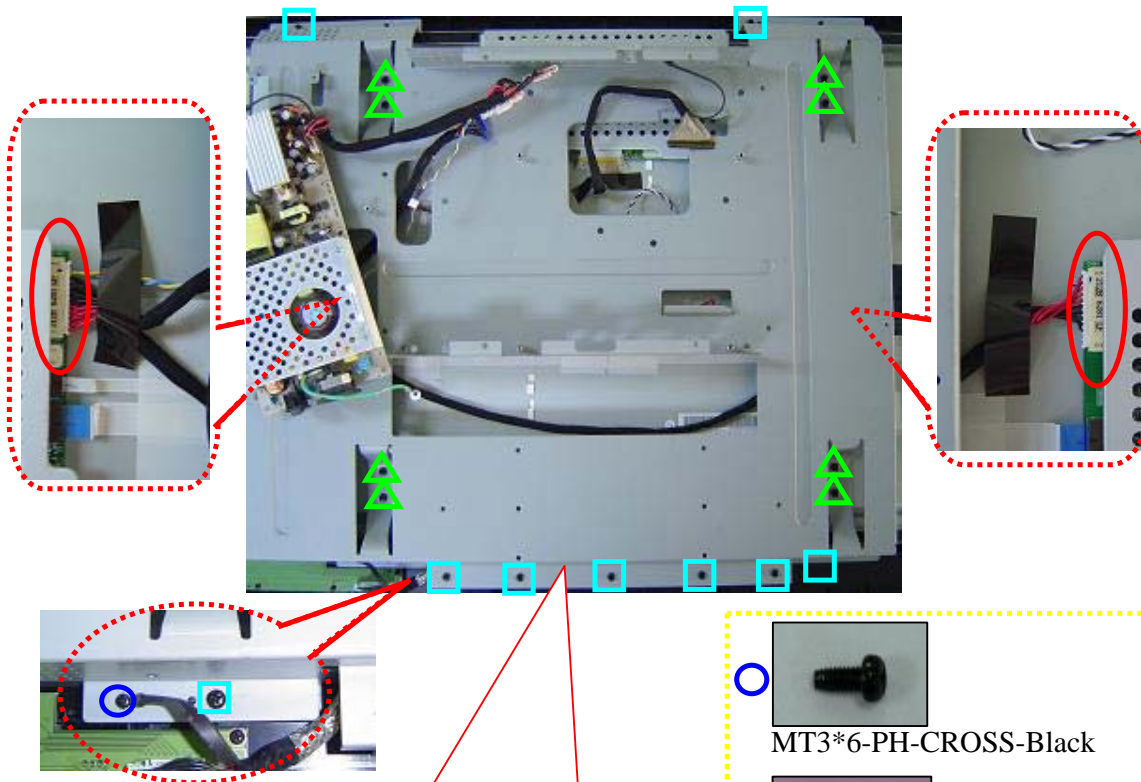


2. Loosen and remove 18 screws and safely remove connectors indicated by red circles.
3. Move the **Wall mount** and pull out connector as red circles.
4. Safely remove the **Power module** and **Wall mount**.

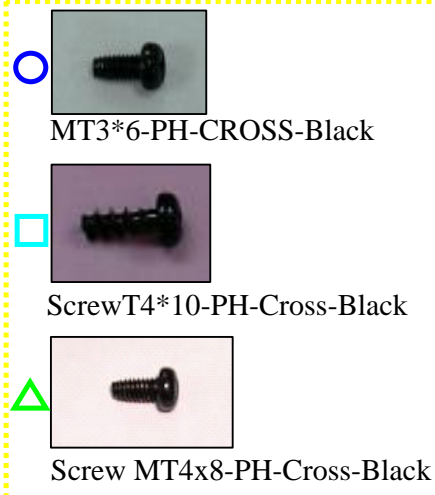

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>15/44</b>

## 5-5 Panel Module

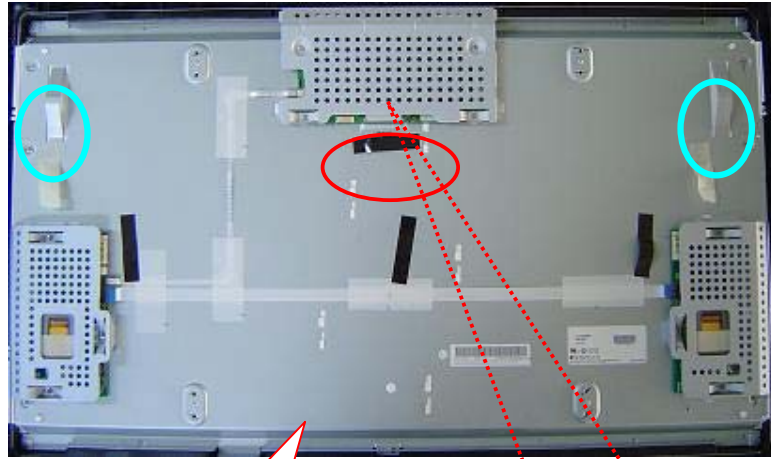


1. Safely remove the **LVDS wire** indicated by red circles.
2. Remove the **panel housing**.




TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	16/44

## 5-6 Speakers

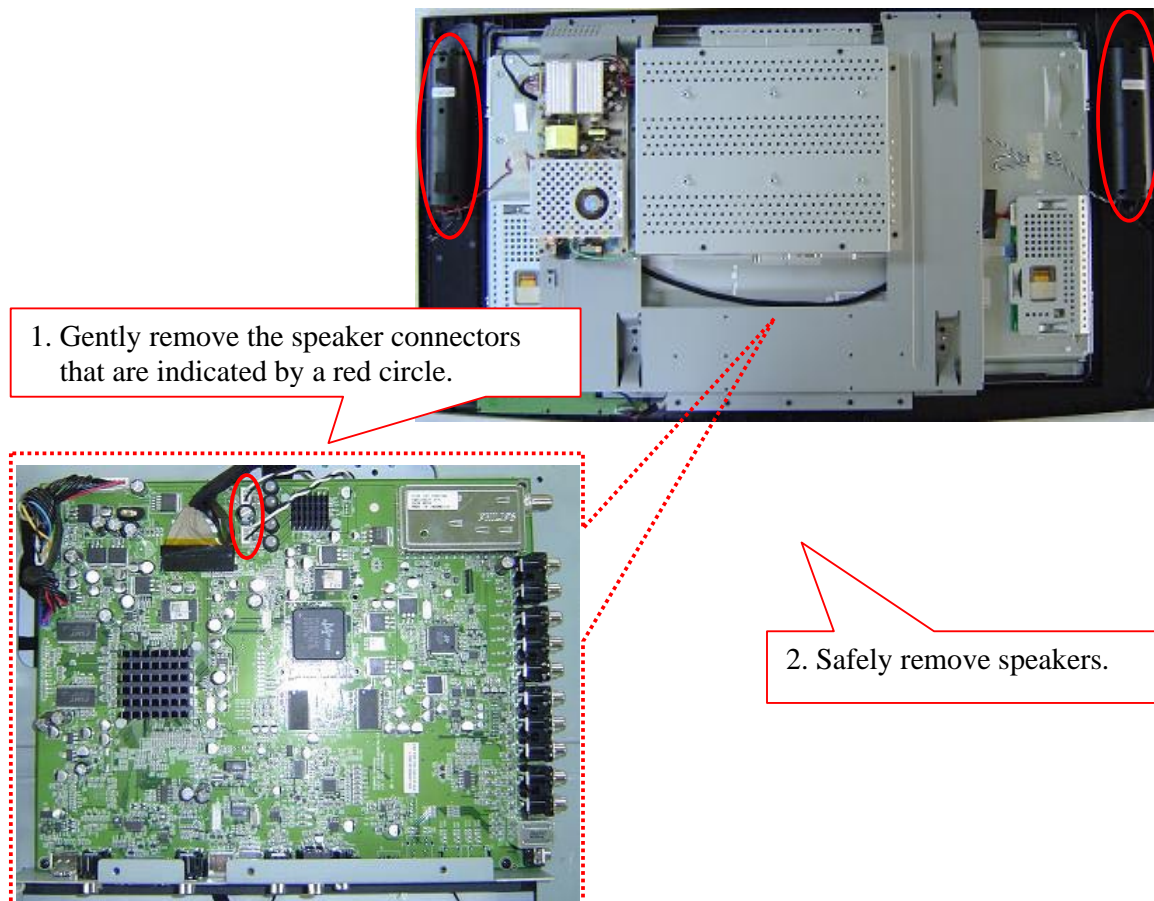

## 5-7 Keypad Board

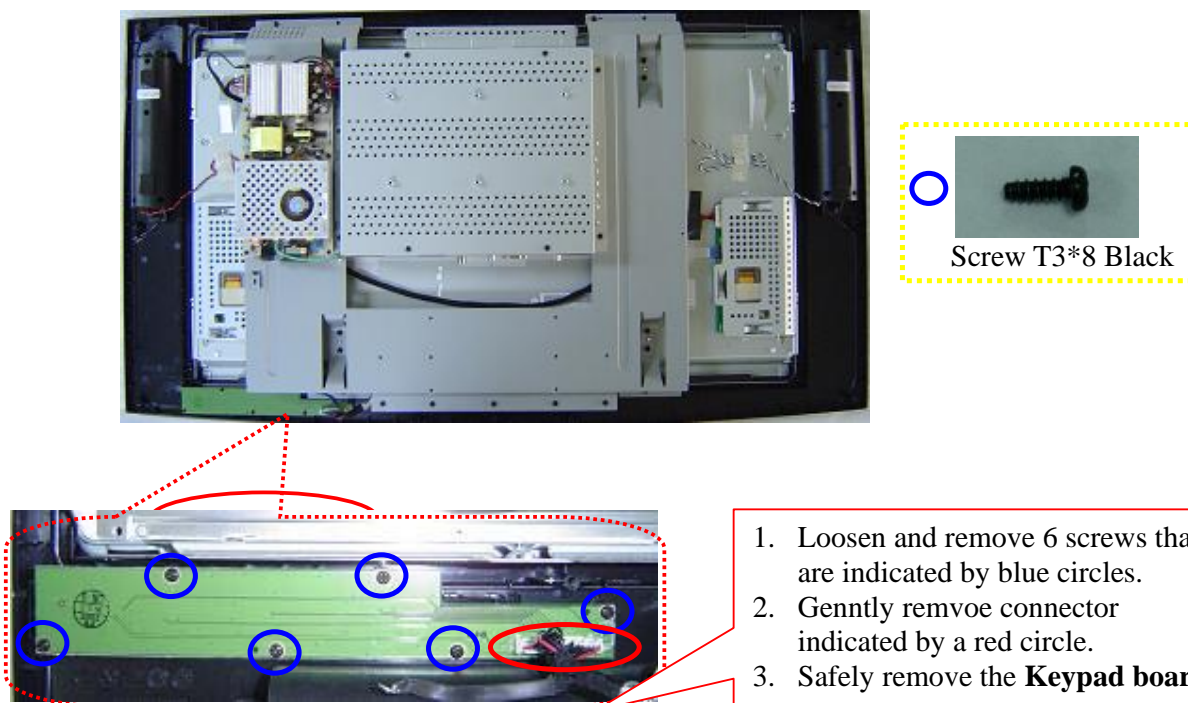



TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	17/44

## 6. Firmware upgrade

# Olevia Firmware Updating Instructions

### What does this do?

This process installs a new version of the firmware and fixes the past bugs.

### What products does this instruction apply to?

Model: Olevia 227, 232, 427, 432, 527 and 532

### What do you need before installing?

1. A compatible USB thumb drive
2. A Computer with Microsoft® Windows® 2000 or Microsoft® Windows® XP operating systems.


### Important Notes:

1. To make sure that no other files are in the thumb drive.
2. It is highly recommended to print the instructions as a reference before installing.



### Loading Instructions:

1. Review the available downloads, the bugs fixed, and the new features added.
2. Follow the instructions on the firmware download section to successfully download and load firmware into the TV.

**Note: USB thumb drive must be formatted in FAT32 for detection.**

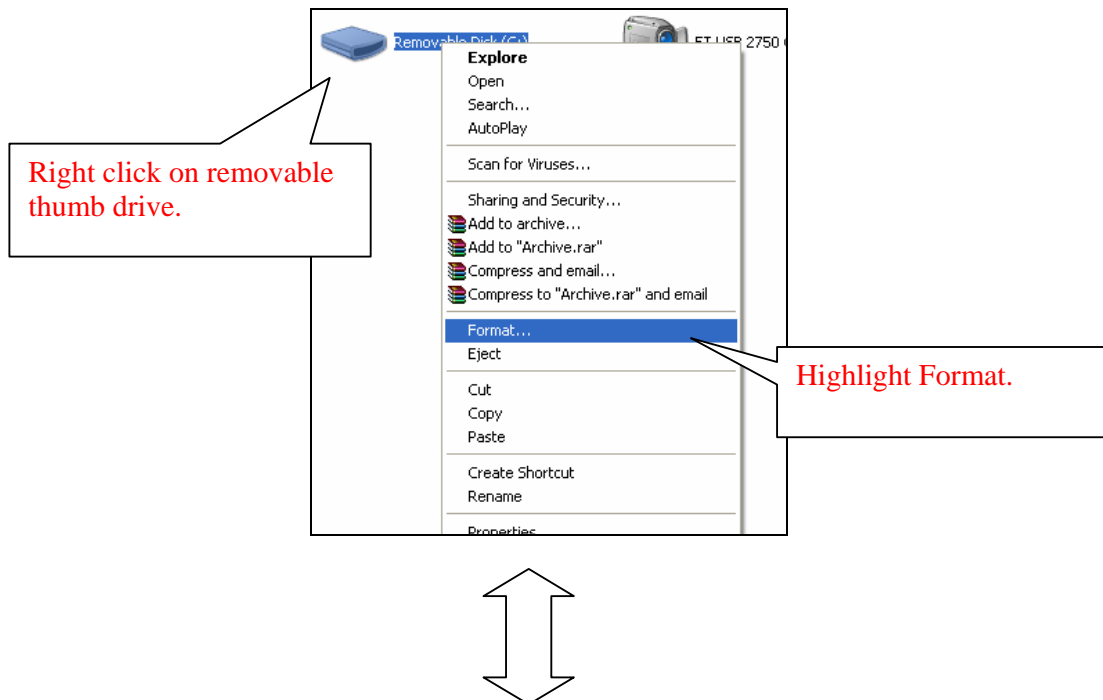

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>18/44</b>

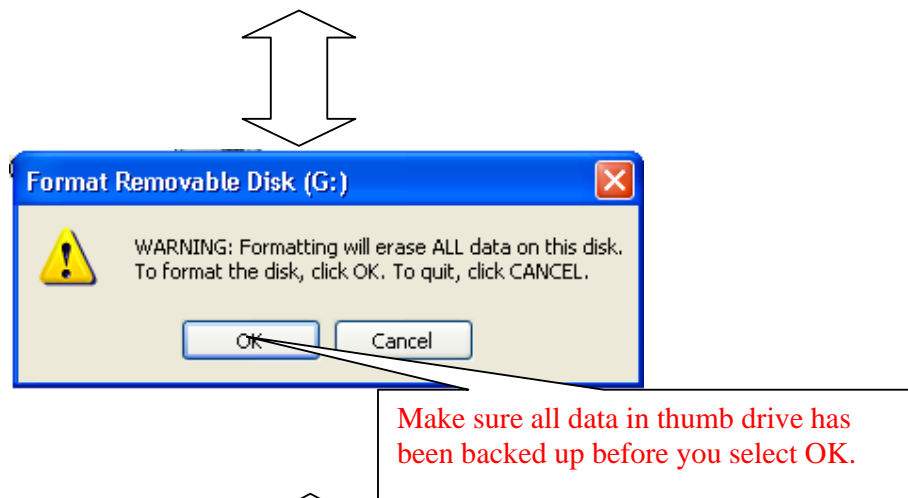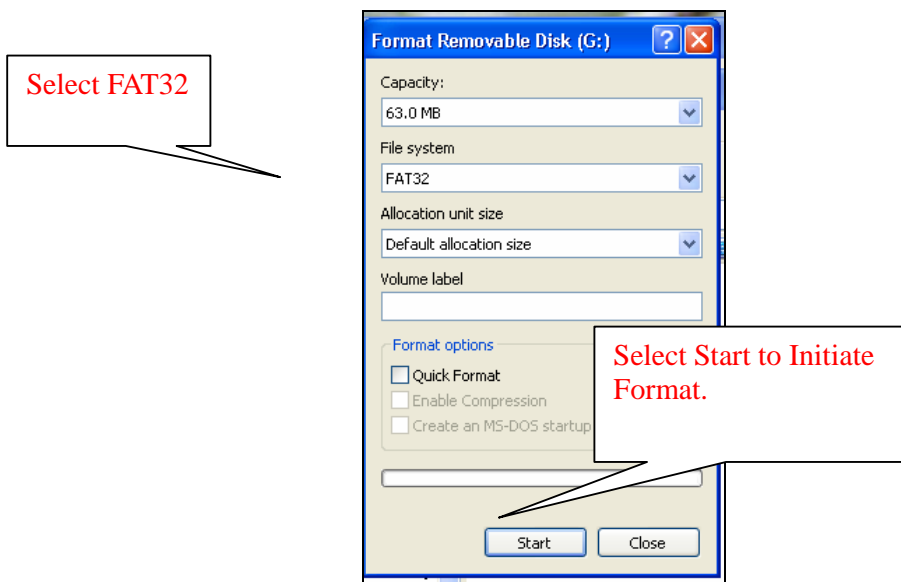

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>19/44</b>

3. After you have located the firmware, download it to a thumb drive. There are five different files.
4. Turn TV off and insert the USB thumb drive into the TV's USB input.
5. Turn TV power on, OLEVIA screen will pop up and after a few seconds a blue bar and will appear on the lower part of the screen covering the whole image from left to right, then a red bar.
6. Once the firmware loading is complete the TV will turn on and initial Home/Showroom option screen will appear.
7. Check under OSD menu Firmware Version and make sure that it matches with that of thumb drive. (Menu→Setup→Firmware Version)
8. Take off the thumb drive.
9. For more help, please call our technical support at 1-866-9OLEVIA (965-3842)

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	20/44


## 7. EDID write in and ADC correction and Parameter Adjustment

### 7-1 EDID write in


#### 7-1.1 EDID tools

1. PC ( Notebook )
2. Software ( EDID Write Eeprom20060816.exe ) and confirm Personal computer hard disk Have 2 files (1. C:\EDID Editor(including Hex files) 2.C:\LCD TV\DATA(product and record had No.)
3. EDID PCBA tool、USB cable、RS232 mini din、Print cable、VGA cable

#### 7-1.2 EDID write in

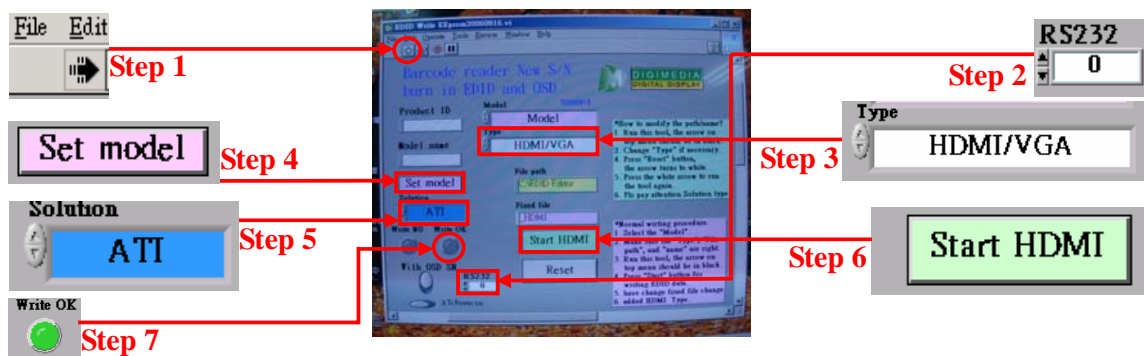



1. Open Labview EDID Writ Eeprom20060816 file, and confirm software Keep Running. ( Refer **Step 1** )
2. choice RS-232 (PC System)Port No.(Refer **Step 2** ) , choice burn in type (Refer **Step 3**)
3. press Set Model button( Refer **Step 4** ), and key in 232-S12. and confirm Scalar solution ( Refer **Step 5** )
4. confirm EDID Jig PCBA (printer port and USB A-B Line connect to PC, HDMI line to TV first , MinDim RS-232 to TV)
5. and then press Button ( Refer **Step 6** ) , then open a save file path in widow.

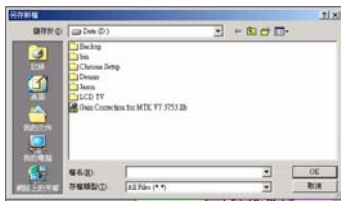

operate Barcode scanner scan S/N stick No.

6. First write HDMI EDID code , if finish OK you can find green light. ( Refer **Step 7** )
7. And have a message that change EDID Jip PCBA VGA Cable to TV.(HDMI line must leave

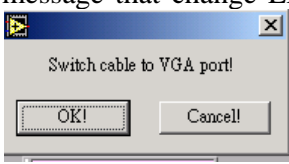PCBA Jig.)  ,if write OK you can fine green light  and show the

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	21/44



message that change next set.



## 7-2 ADC correction and Parameter adjustment

ADC correction and Parameter adjustment tools :

1. PC ( Notebook )
2. CHROMA 2325
3. MINOLTA CA-210
4. Software ( Gamma Calculator6A\_Jason.exe )

### 7-2.1 ADC correction

1. Click the icon on the desk "Gamma Calculator" (please see **Photo 1**), and then **Photo 2** would show up.
2. Click the icon "Gamma Calculator" of **Photo 2**, and then **Photo 3** would show up.
3. Connect "RS232" & "VGA" with TV.
4. click the "arrow mark" (which is circle by red) in **Photo 3**, and then click the icon "ADC" also in **Photo 3** blue circle.
5. The window will show up with the instruction about component, and then connecting component instead of VGA port.
6. The ADC process is completed once the window with the message "OK" shows up.

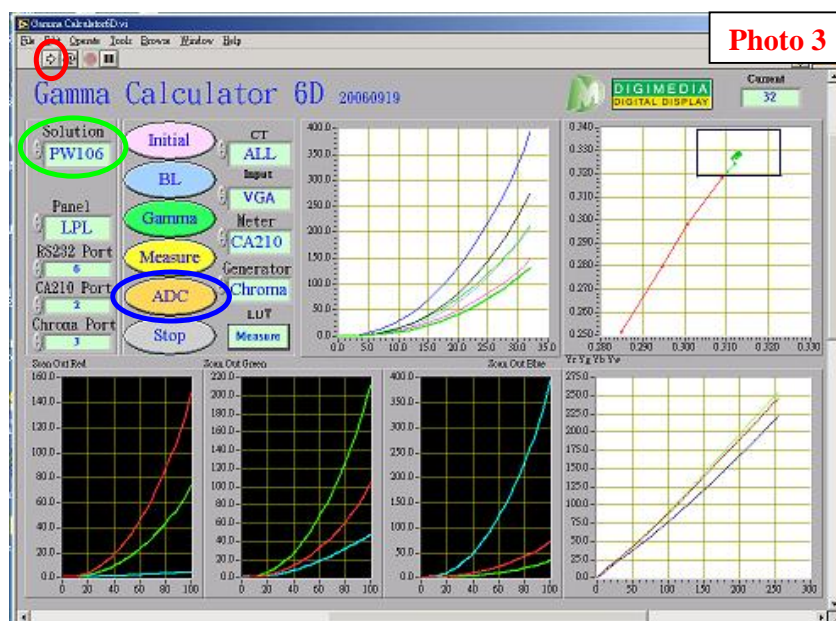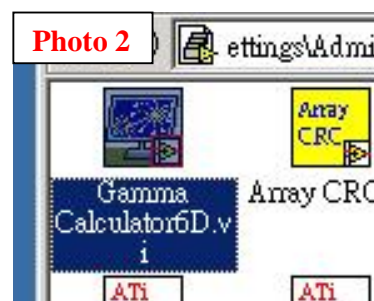

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>22/44</b>


**Attention :**

- 1. Please make sure it's under "VGA Source" before processing ADC.**
- 2. Please pay attention to different solution for ATI/MTK8202/PW106 as **Photo 3** green circle.**
- 3. Please make sure the set-up for RS232 is correct.**

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	23/44

## 7-2.2 Parameter adjustment


1. Click the icon on the desk "Gamma Calculator" (please see **Photo 1**), and then **Photo 2** would show up.
2. Click the icon "Gamma Calculator" of **Photo 2**, and then **Photo 3** would show up.
3. Please follow (as **Photo 4** blue circle) to choose the solution & panel mode.
4. Connect the " RS232, USB, VGA changeful wire, and audio wire" with TV. And then connect the other side of VGA changeful wire with the pattern generator, and set up the TV source under "VGA". And please locate the "CA-210" on center of TV screen.
5. Click "BL" button, and the window with "Gamma adjustment" message would show up. Please click "OK" for next step. (as **Photo 4** red circle)
6. Adjust the GAMMA (R;G;B) and then click the button "Enter" after GAMMA adjustment is completed.(Please follow **Photo 5, 6**)
7. Please check the result.

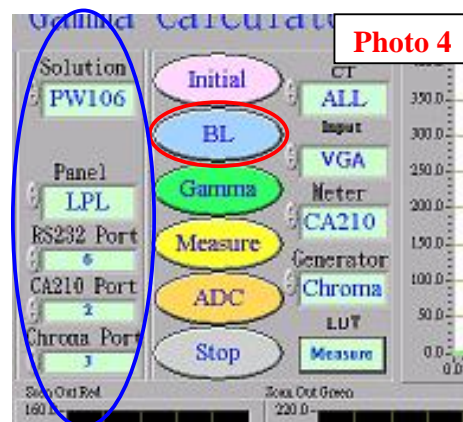

**Photo 4**



**Photo 5**

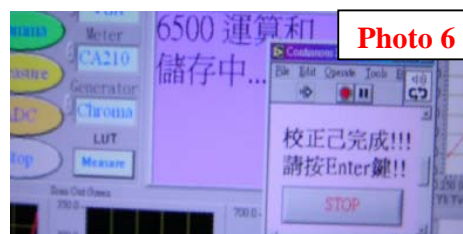


**Photo 6**

### Attention :

#### Check pattern points for adjustment

(CHROMA PROGRAM : 71 1360\_FT\_VGA) :

1. Check if the frame is damaged and if the size is smaller than normal, or if those points in the 5 squares correspond well. (**Photo 7**)
2. Each gray bar should be identified with only pure color.(**Photo 8**)
3. 256 Gray. L->R--->check if there is sync (influenced by high frequency). (**Photo 9**)

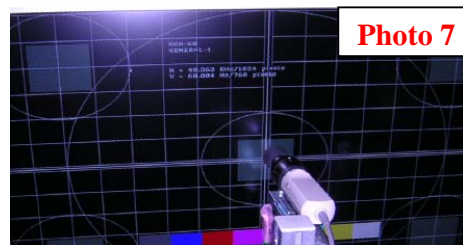

**Photo 7**



**Photo 8**



**Photo 9**

TITLE	Service Manu LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	24/44

## 8. Exploded view

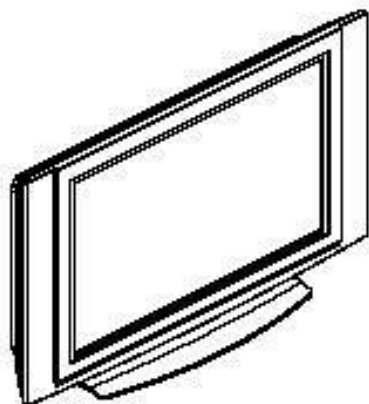


Figure 1


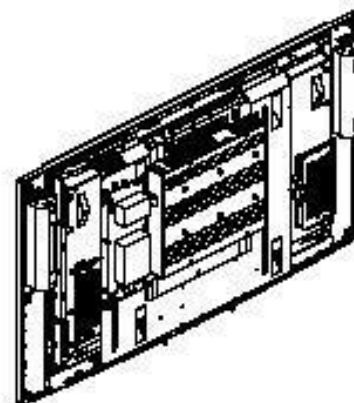



Figure 2



232-S12 Explosive view-1

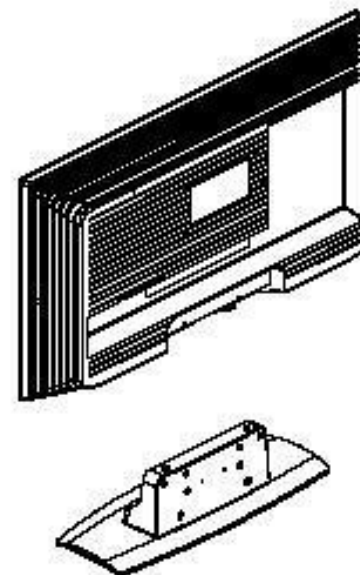

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	25/44

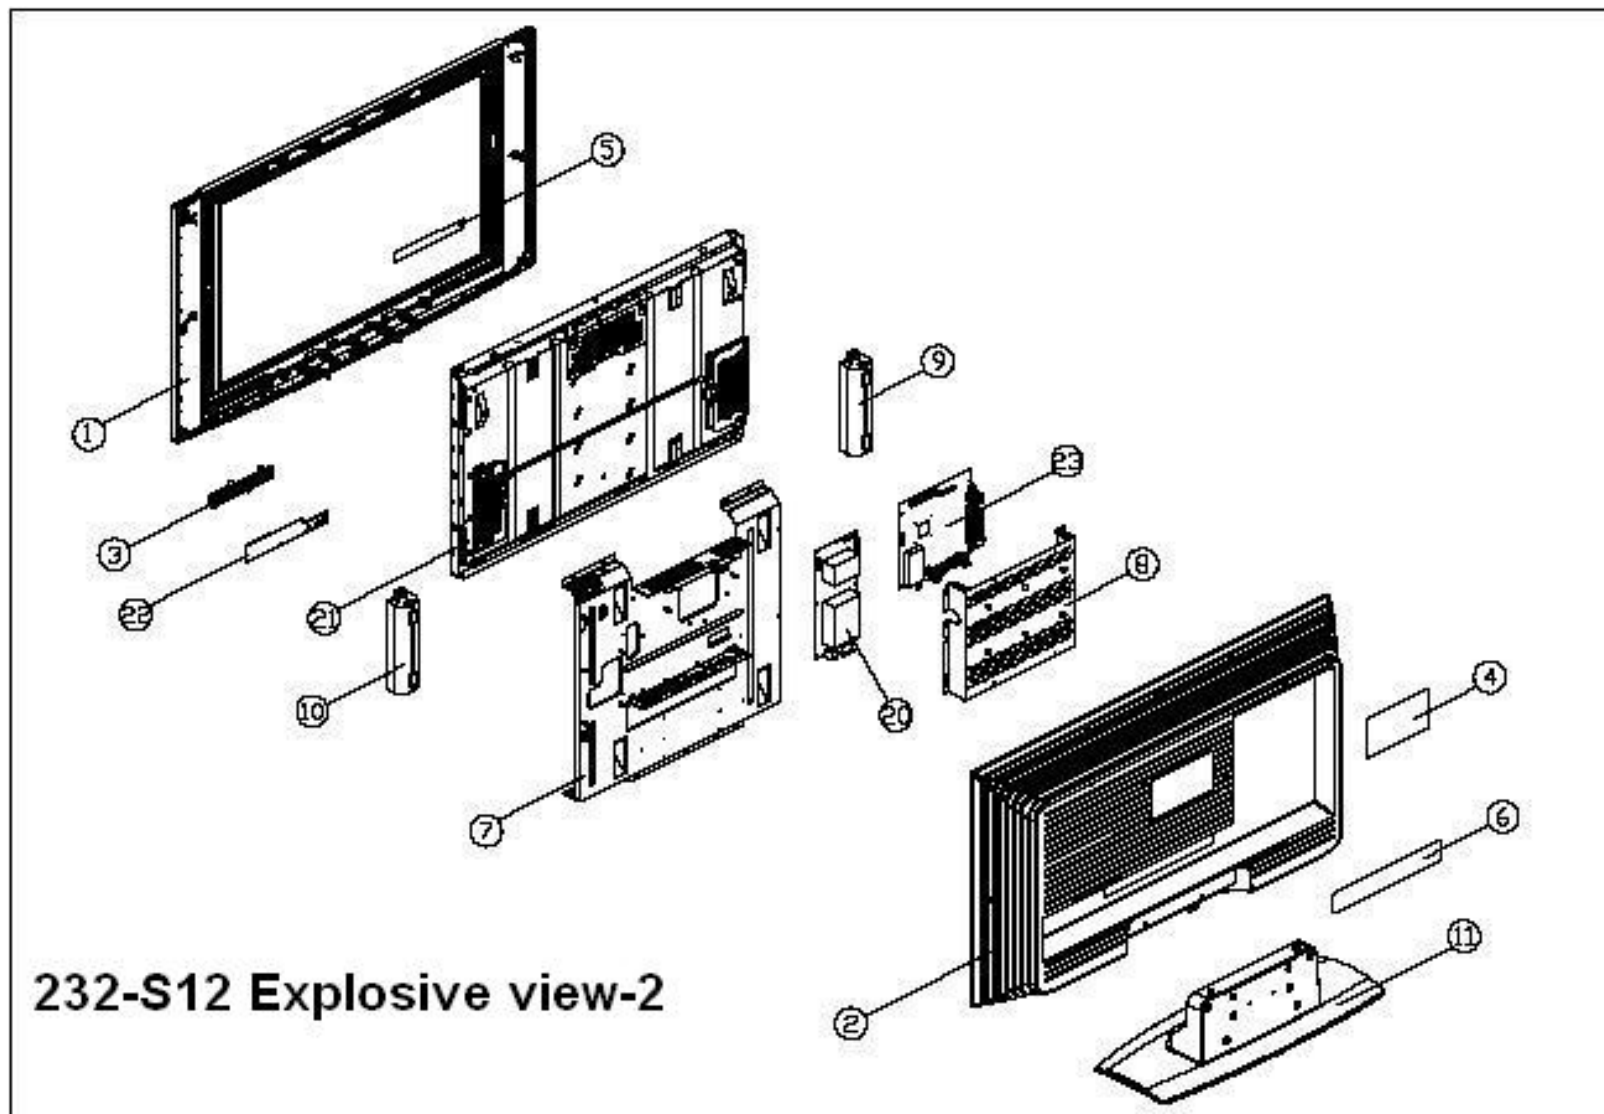

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	26/44

## 9. Parts List and Photo

### 9-1 PARTS LIST

232-S12 Parts List (FM1-032000EGS42)							
Item	Parts Name	Parts NO.	Q'th	Item	Parts Name	Parts NO.	Q'th
1	32C_S_LPL_FRONT_MODULE	SC1-0000142G000	1	21	LPL 32" LCD Panel w/ AI+Sync	ELP-321SL01G000	1
2	32C_S_Back_Module	SC1-0000143G000	1	22	P0517 Keypad PCBA	SC0-P517701GAD0	1
3	32_37C_KEYPAD_BUTTON	MP0-0000497G000	1	23	ADA1 PCBA R0.7(for 32" LPL P/N)	SC0-P517207GADL	1
4	232-S12 Marketing Label	ML0-1000090G000	1	24	32C LPL LVDS wire-AI	ECB-5LC0123G000	1
5	527_532 tech label-GP	ML0-0000313G001	1	25	32C kp. wire no tape	ECB-5KP0455G000	1
6	ATi GRAPHIC LABEL_26/27/32	ML0-0000285G000	1	26	Magnet buckle-B15-UH-13x23x7	EEC-PLB15UHG000	2
7	Support Metal Assy_ATI-A	SX0-0000269G001	1	27	Clip Core	EEC-PLLF150G000	1
8	32C WALLMOUNT MODULE_ATI	SX0-0000265G000	1	28	32C(S) Cush Top	MP2-1000026G000	1
9	32C_SPEAKER_MODULE_RIGHT	SX0-0000245G000	1	29	32C(S) Cush Bottom	MP2-1000027G000	1
10	32C_SPEAKER_MODULE_LEFT	SX0-0000246G000	1	30	32C_side EPE Bag	MP2-0000161G000	1
11	32C Stand Cover	MP0-0000500G000	1	31	232-S12 Carton_w/GP logo	MX0-3000256G000	1
12	32 FOOT PAD	MM0-0000034G000	6	32	AC Power Cord	ECB-0318AW8G000	1
13	Flat Cable Clip_FAA51-PG	EEC-FCFAA51G000	1	33	LT23HVT Remote control	EEC-RC0CG37G000	1
14	Screw T4*10-PH-Cross-Black	MS0-1A34010G000	21	34	CD-En-Fr_ATi_MTK (2 Series-1)	MD0-CD00040G000	1
15	SCREW T3*8 Black	MS0-WA33008G000	13	35	2 Series Warranty Card w/ 226	MK0-UM00132G000	1
16	Screw MT4*8-NI	MS0-FA14008G000	1	36	Battery 1.5V AAASize, GP(NV-UM4E)	EEC-BAGP24GG000	2
17	SCREW MT4*8-PH-CROSS-BLACK	MS0-WA34008G000	16	37	Olevia_HookUp_8_(En/Fr)	MK0-UM00124G000	1

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>27/44</b>

18	SCREW MT3*6-PH-CROSS-Black	MS0-A133006G000	13	38	Ziploc bags#10(W/O LOGO)	MX0-0000025G000	1
19	Screw M4 25mm	MS0-1A34025G000	6	39	QSG-En-Fr_ATi_226_227_232	MK0-QS00059G000	1
20	32" ARESTECH Power Module for LPL	EEC-PW32LPLG000	1	40	32 PANEL PROTECTION FILM	MP0-0000318G000	1

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	28/44

## 9-2 PARTS PHOTO

Item NO : 1

Parts name : 32C\_S\_LPL\_FRONT\_MODULE

Parts NO : SC1-0000142G000



Item NO : 2

Parts name : 32C\_S\_Back\_Module

Parts NO : SC1-0000143G000



Item NO : 3

Parts name : 32\_37C\_KEYPAD\_BUTTON

Parts NO. : MP0-0000497G000



Item NO : 4

Parts name : 232-S12 Marketing Label


Parts NO. : ML0-1000090G000



Item NO : 5

Parts name : 527\_532 tech label-GP

Parts NO. : ML0-0000313G001

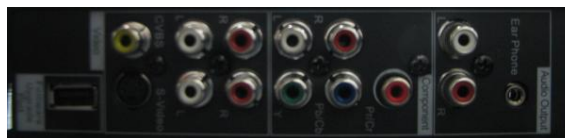

Item NO : 6

Parts name : ATi GRAPHIC LABEL\_26/27/323

Parts NO. : ML0-0000285G000




<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>29/44</b>

Item NO : 7

Parts name : Support Metal Assy\_ATI-A

Parts NO :

SX0-0000269G001

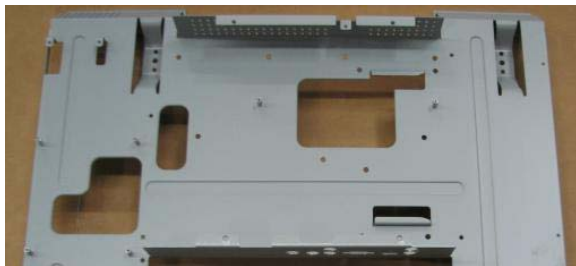

Item NO : 8

Parts name : 32C WALLMOUNT MODULE\_ATI

Parts NO. :

SX0-0000265G000



Item NO : 9

Parts name : 32C\_SPEAKER\_MODULE\_RIGHT

Parts NO. : SX0-0000245G000



Item NO : 10

Parts name : 32C\_SPEAKER\_MODULE\_LEFT

Parts NO. : SX0-0000246G000



Item NO : 11

Parts name : 32C Stand Cover

Parts NO. : MP0-0000500G000



Item NO : 12

Parts name : 32 FOOT PAD

Parts NO. : MM0-0000034G000



<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>30/44</b>

Item NO : 13

Parts name : Flat Cable Clip\_FAA51-PG


Parts NO. : EEC-FCFAA51G000



Item NO : 14

Parts name : Screw T4\*10-PH-Cross-Black


Parts NO. : MS0-1A34010G000

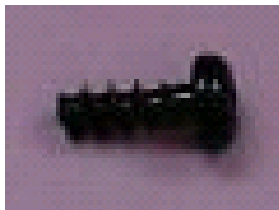

Item NO : 15

Parts name : SCREW T3\*8 Black

Parts NO. : MS0-WA33008G000

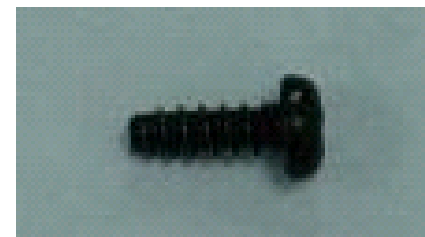

Item NO : 16

Parts name : Screw MT4\*8-NI


Parts NO. : MS0-FA14008G000



Item NO : 17

Parts name : SCREW MT4\*8-PH-CROSS-BLACK


Parts NO. : MS0-WA34008G000

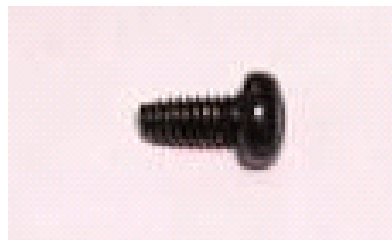

Item NO : 18

Parts name : SCREW MT3\*6-PH-CROSS-Black

Parts NO. : MS0-A133006G000

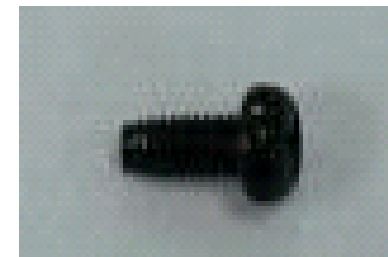


<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>31/44</b>

Item NO : 19

Parts name : Screw M4 25mm

Parts NO. : MS0-1A34025G000

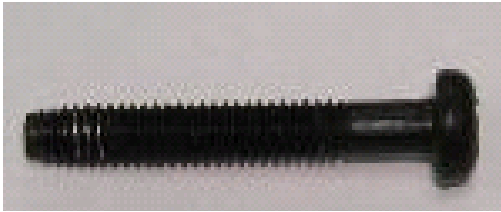

Item NO : 20

Parts name : 32" ARESTECH Power Module for LPL


Parts NO. : EEC-PW32LPLG000



Item NO : 21

Parts name : LPL 32" LCD Panel w/ AI+Sync

Parts NO. : ELP-321SL01G000

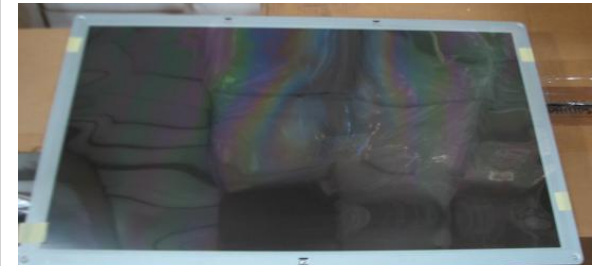

Item NO : 22

Parts name : P0517 Keypad PCBA

Parts NO. : SC0-P517701GAD0



Item NO : 23

Parts name : ADA1 PCBA R0.7(for 32" LPL P/N)

Parts NO: SC0-P517207GADL



Item NO : 24

Parts name : 32C LPL LVDS wire-AI

Parts NO. : ECB-5LC0123G000





<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>32/44</b>

Item NO : 25

Parts name : 32C kp. wire no tape

Parts NO. : ECB-5KP0455G000



Item NO : 26

Parts name : Magnet buckle-B15-UH-13x23x7

Parts NO. : EEC-PLB15UHG000



Item NO : 27

Parts name : Clip Core


Parts NO. : EEC-PLLF150G000



Item NO : 28

Parts name : 32C(S) Cush Top

Parts NO. : MP2-1000026G000

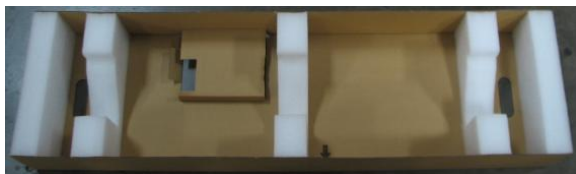

Item NO : 29

Parts name : 32C(S) Cush Bottom

Parts NO. : MP2-1000027G000



Item NO : 30

Parts name : 32C\_side EPE Bag

Parts NO. : MP2-0000161G000





<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>33/44</b>

Item NO : 31

Parts name : 232-S12 Carton\_w/GP logo

Parts NO. : MX0-3000256G000



Item NO : 32

Parts name : AC Power Cord

Parts NO. : ECB-0318AW8G000



Item NO : 33

Parts name : LT23HVT Remote control

Parts NO. : EEC-RC0CG37G000



Item NO : 34

Parts name : CD-En-Fr\_ATi\_MTK (2 Series-1)


Parts NO. : MD0-CD00040G000



Item NO : 35

Parts name : Series Warranty Card w/ 226

Parts NO. : MK0-UM00132G000

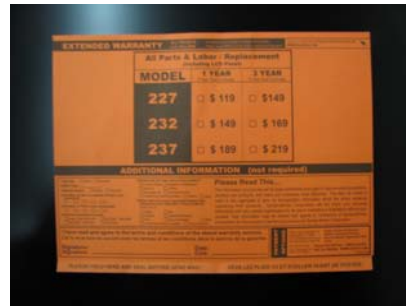

Item NO : 36

Parts name : Battery 1.5V AAASize, GP(NV-UM4E)

Parts NO. : EEC-BAGP24GG000




TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	34/44

Item NO : 37

Parts name : Olevia\_HookUp\_8\_(En/Fr)

Parts NO. : MK0-UM00124G000

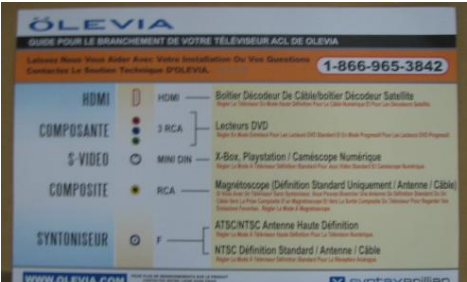

Item NO : 39

Parts name : QSG-En-Fr\_ATi\_226\_227\_232

Parts NO. : MK0-QS00059G000

Item NO : 40

Parts name : 32 PANEL PROTECTION FILM

Parts NO. : MP0-0000318G000



TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	35/44

### 9-3 PARTS LIST ( Low bright Panel )

232-S12 (LB) Parts List (FM1-032000EGS49)							
Item	Parts Name	Parts NO.	Q'th	Item	Parts Name	Parts NO.	Q'th
1	32C_S_LPL_FRONT_MODULE	SC1-0000142G000	1	21	LPL 32" Panel_low brightness	ELP-32LCSLBG000	1
2	32C_S_Back_Module	SC1-0000143G000	1	22	P0517 Keypad PCBA	SC0-P517701GAD0	1
3	32_37C_KEYPAD_BUTTON	MP0-0000497G000	1	23	ADA1 PCBA R0.7(for 32" LPL P/N)	SC0-P517207GADL	1
4	232-S12 Marketing Label	ML0-1000090G000	1	24	32C LPL LVDS wire-AI	ECB-5LC0123G000	1
5	527_532 tech label-GP	ML0-0000313G001	1	25	32C kp. wire no tape	ECB-5KP0455G000	1
6	ATi GRAPHIC LABEL_26/27/32	ML0-0000285G000	1	26	Magnet buckle-B15-UH-13x23x7	EEC-PLB15UHG000	2
7	Support Metal Assy_ATI-A	SX0-0000269G001	1	27	Clip Core	EEC-PLLF150G000	1
8	32C WALLMOUNT MODULE_ATI	SX0-0000265G000	1	28	32C(S) Cush Top	MP2-1000026G000	1
9	32C_SPEAKER_MODULE_RIGHT	SX0-0000245G000	1	29	32C(S) Cush Bottom	MP2-1000027G000	1
10	32C_SPEAKER_MODULE_LEFT	SX0-0000246G000	1	30	32C_side EPE Bag	MP2-0000161G000	1
11	32C Stand Cover	MP0-0000500G000	1	31	232-S12 Carton_w/GP logo	MX0-3000256G000	1
12	32 FOOT PAD	MM0-0000034G000	6	32	AC Power Cord	ECB-0318AW8G000	1
13	Flat Cable Clip_FAA51-PG	EEC-FCFAA51G000	1	33	LT23HVT Remote control	EEC-RC0CG37G000	1
14	Screw T4*10-PH-Cross-Black	MS0-1A34010G000	21	34	CD-En-Fr_ATi_MTK (2 Series-1)	MD0-CD00040G000	1
15	SCREW T3*8 Black	MS0-WA33008G000	13	35	2 Series Warranty Card w/ 226	MK0-UM00132G000	1
16	Screw MT4*8-NI	MS0-FA14008G000	1	36	Battery 1.5V AAASize, GP(NV-UM4E)	EEC-BAGP24GG000	2
17	SCREW MT4*8-PH-CROSS-BLACK	MS0-WA34008G000	16	37	Olevia_HookUp_8_(En/Fr)	MK0-UM00124G000	1
18	SCREW MT3*6-PH-CROSS-Black	MS0-A133006G000	13	38	Ziploc bags#10(W/O LOGO)	MX0-0000025G000	1

<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>36/44</b>

19	Screw M4 25mm	MS0-1A34025G000	6	39	QSG-En-Fr_ATi_226_227_232	MK0-QS00059G000	1
20	32" ARESTECH Power Module for LPL	EEC-PW32LPLG000	1	40	32 PANEL PROTECTION FILM	MP0-0000318G000	1

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	37/44

#### 9-4 PARTS PHOTO ( Low bright Panel )

Item NO : 1

Parts name : 32C\_S\_LPL\_FRONT\_MODULE

Parts NO : SC1-0000142G000



Item NO : 2

Parts name : 32C\_S\_Back\_Module

Parts NO : SC1-0000143G000



Item NO : 3

Parts name : 32\_37C\_KEYPAD\_BUTTON

Parts NO. : MP0-0000497G000



Item NO : 4

Parts name : 232-S12 Marketing Label


Parts NO. : ML0-1000090G000



Item NO : 5

Parts name : 527\_532 tech label-GP Parts

NO. : ML0-0000313G001

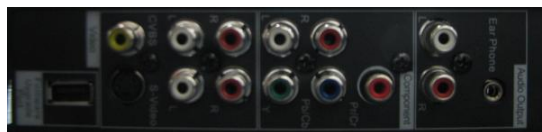

Item NO : 6

Parts name : ATi GRAPHIC LABEL\_26/27/323

Parts NO. : ML0-0000285G000




<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>38/44</b>

Item NO : 7

Parts name : Support Metal Assy\_ATI-A

Parts NO. : SX0-0000269G001

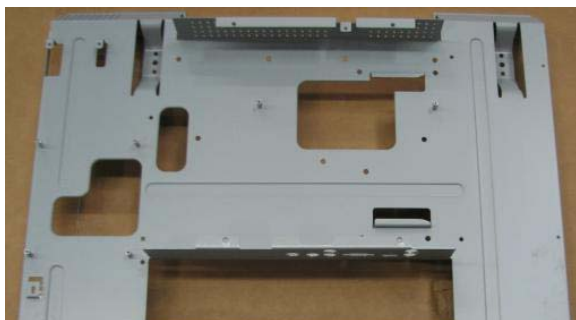

Item NO : 8

Parts name : 32C WALLMOUNT MODULE\_ATI

Parts NO. : SX0-0000265G000



Item NO : 9

Parts name : 32C\_SPEAKER\_MODULE\_RIGHT

Parts NO. : SX0-0000245G000



Item NO : 10

Parts name : 32C\_SPEAKER\_MODULE\_LEFT

Parts NO. : SX0-0000246G000



Item NO : 11

Parts name : 32C Stand Cover

Parts NO. : MP0-0000530G000



Item NO : 12

Parts name : 32 FOOT PAD

Parts NO. : MM0-0000034G000



<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>39/44</b>

Item NO : 13

Parts name : Flat Cable Clip\_FAA51-PG


Parts NO. : EEC-FCFAA51G000



Item NO : 14

Parts name : Screw T4\*10-PH-Cross-Black


Parts NO. : MS0-1A34010G000

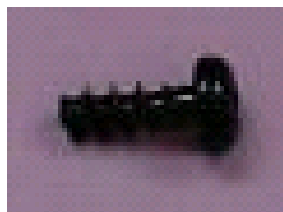

Item NO : 15

Parts name : SCREW T3\*8 Black

Parts NO. : MS0-WA33008G000

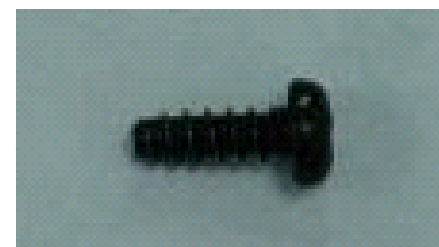

Item NO : 16

Parts name : Screw MT4\*8-NI


Parts NO. : MS0-FA14008G000



Item NO : 17

Parts name : SCREW MT4\*8-PH-CROSS-BLACK


Parts NO. : MS0-WA34008G000

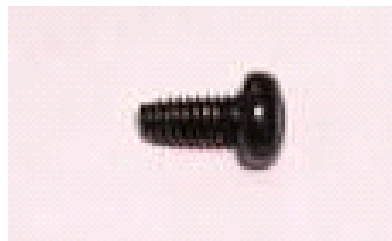

Item NO : 18

Parts name : SCREW MT3\*6-PH-CROSS-Black

Parts NO. : MS0-A133006G000

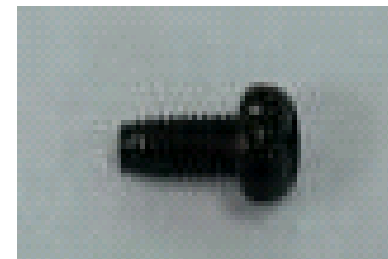


<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>40/44</b>

Item NO : 19

Parts name : Screw M4 25mm

Parts NO. : MS0-1A34025G000

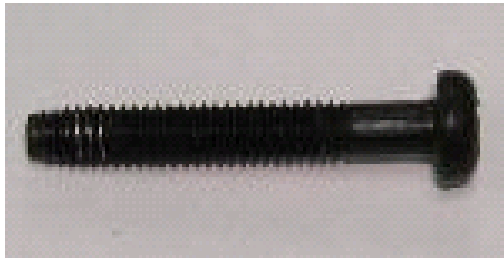

Item NO : 20

Parts name : 32" ARESTECH Power Module for LPL


Parts NO. : EEC-PW32LPLG000



Item NO : 21

Parts name : LPL 32" Panel\_low brightness


Parts NO. : ELP-32LCSLBG000

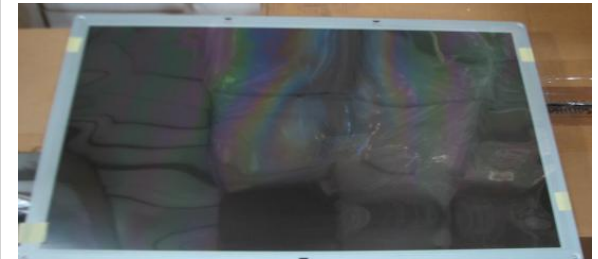

Item NO : 22

Parts name : P0517 Keypad PCBA

 Parts NO. : SC0-P517701GAD0



Item NO : 23

Parts name : ADA1 PCBA R0.7(for 32" LPL P/N)

Parts NO: SC0-P517207GADL



Item NO : 24

Parts name : 32C LPL LVDS wire-AI

Parts NO. : ECB-5LC0123G000





<b>TITLE</b>	<b>Service Manual LCD TV For 232-S12</b>	<b>Doc No.</b>	
		<b>Version</b>	<b>1.0</b>
		<b>Page</b>	<b>41/44</b>

Item NO : 25

Parts name : 32C kp. wire no tape

Parts NO. : ECB-5KP0455G000



Item NO : 26

Parts name : Magnet buckle-B15-UH-13x23x7

Parts NO. : EEC-PLB15UHG000



Item NO : 27

Parts name : Clip Core


Parts NO. : EEC-PLLF150G000



Item NO : 28

Parts name : 32C(S) Cush Top

Parts NO. : MP2-1000026G000

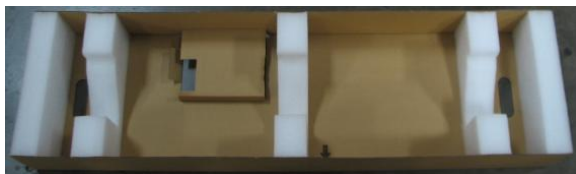

Item NO : 29

Parts name : 32C(S) Cush Bottom

Parts NO. : MP2-1000027G000



Item NO : 30

Parts name : 32C\_side EPE Bag

Parts NO. : MP2-0000161G000



TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	42/44

Item NO : 31

Parts name : 232-S12 Carton\_w/GP logo

Parts NO. : MX0-3000256G000



Item NO : 32

Parts name : AC Power Cord


Parts NO. : ECB-0318AW8G000



Item NO : 33

Parts name : LT23HVT Remote control


Parts NO. : EEC-RC0CG37G000

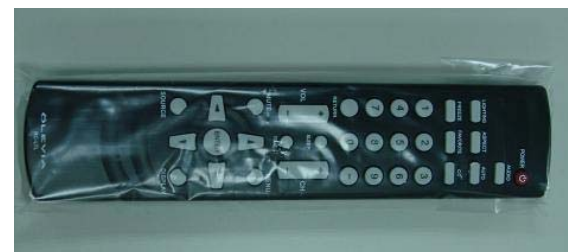

Item NO : 34

Parts name : CD-En-Fr\_ATi\_MTK (2 Series-1)


Parts NO. : MD0-CD00040G000

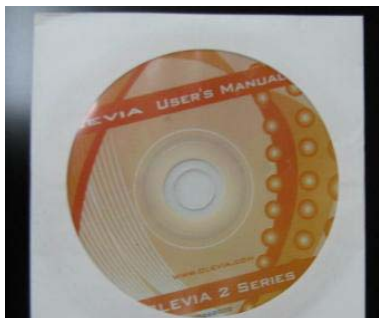

Item NO : 35

Parts name : Series Warranty Card w/ 226

Parts NO. : MK0-UM00132G000

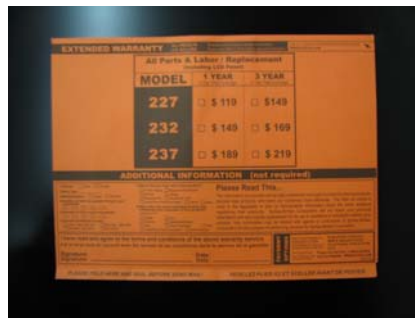

Item NO : 36

Parts name : Battery 1.5V AAASize, GP(NV-UM4E)

Parts NO. : EEC-BAGP24GG000




TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	43/44

Item NO : 37

Parts name : Olevia\_HookUp\_8\_(En/Fr)


Parts NO. : MK0-UM00124G000

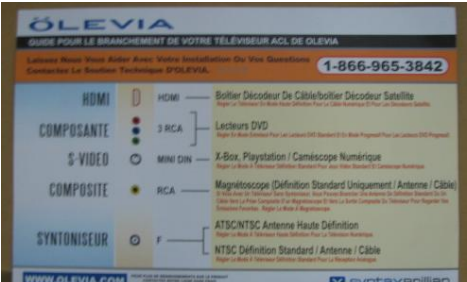

Item NO : 39

Parts name : QSG-En-Fr\_ATi\_226\_227\_232

Parts NO. : MK0-QS00059G000

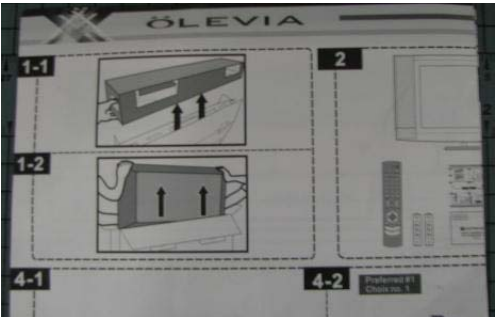

TITLE	Service Manual LCD TV For 232-S12	Doc No.	
		Version	1.0
		Page	44/44

## 10. Block Diagram

### ADA1 BLOCK DIAGRAM

